


# NSX-AJ10 U NSX-SZ10 LH NSZ-SZ10E HA

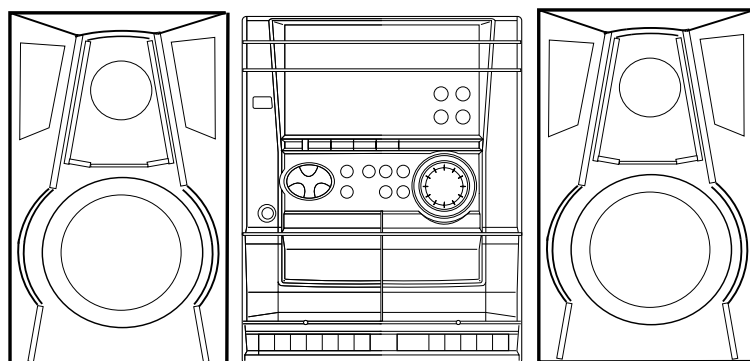

## SERVICE MANUAL

COMPACT DISC STEREO  
CASSETTE RECEIVER

BASIC TAPE MECHANISM : ZZM-2 PR1NM / PR1NC  
BASIC CD MECHANISM : AZG-1

SYSTEM	CD CASSEIVER	SPEAKER	CD MECHANISM	REMOTE CONTROLLER
NSX-AJ10	CX-NAJ10	SX-NAJ12	ZD8RNDC	RC-ZAS02
NSX-SZ10	CX-NSZ10	SX-NSZ15	ZD8RNDC	
NSX-SZ10E	CX-NSZ10E	SX-NSZ15	ZD8RNDM	

- This Service Manual is the "Revision Publishing" and replaces "Simple Manual" NSX-AJ10(U)/NSX-SZ10(LH), (S/M Code No. 09-99C-424-8T1).
- If requiring information about the CD mechanism, see Service Manual of AZG-1 ZD8RNDM, (S/M Code No. 09-001-335-3N6) and AZG-1 ZD8RNDC, (S/M Code No. 09-001-335-3NA).

## SPECIFICATIONS <HA,LH>

### <FM tuner section>

<b>Tuning range</b>	87.5 MHz to 108 MHz
<b>Usable sensitivity (IHF)</b>	13.2 dBf
<b>Antenna terminals</b>	75 ohms (unbalanced)

### <AM tuner section>

<b>Tuning range</b>	530 kHz to 1710 kHz (10 kHz step) 531 kHz to 1602 kHz (9 kHz step)
<b>Usable sensitivity</b>	350 $\mu$ V/m
<b>Antenna</b>	Loop antenna

### <Amplifier section>

<b>Power output</b>	Rated 28 W + 28 W (1 kHz, T.H.D. 1 %, 6 ohms) Reference 35 W + 35 W (1 kHz, T.H.D. 10 %, 6 ohms)
<b>Total harmonic distortion</b>	0.1 % (14 W, 1 kHz, 6 ohms, DIN AUDIO)
<b>Inputs</b>	VIDEO/AUX: 500 mV
<b>Outputs</b>	SPEAKERS: accept speakers of 6 ohms or more PHONES (stereo jack): accepts headphones of 32 ohms or more

### <Cassette deck section>

<b>Track format</b>	4 tracks, 2 channels stereo
<b>Frequency response</b>	50 Hz – 8000 Hz
<b>Recording system</b>	AC bias
<b>Heads</b>	Deck 1 : Recording/playback head x 1, erase head x 1 Deck 2 : Playback head x 1

### <Compact disc player section>

<b>Laser</b>	Semiconductor laser ( $\lambda$ = 780 nm)
<b>D-A converter</b>	1 bit dual
<b>Signal-to-noise ratio</b>	85 dB (1 kHz, 0 dB)
<b>Harmonic distortion</b>	0.05 % (1 kHz, 0 dB)

### <Speaker system SX-NSZ15>

<b>Speaker System</b>	2 way, bass reflex (magnetic shielded type)
<b>Speaker units</b>	Woofer: 120 mm cone type Tweeter: 20mm ceramic type
<b>Impedance</b>	6 ohms
<b>Sensitivity</b>	86 dB/W/m
<b>Dimensions (W x H x D)</b>	220 x 324 x 204 mm
<b>Weight</b>	2.0 kg

### <General>

<b>Power requirements</b>	120 V/220-230 V/240 V AC (switchable), 50/60 Hz
<b>Power consumption</b>	55 W
<b>Power consumption in standby mode</b>	With power-economizing mode off : 12 W With power-economizing mode on : 0.9 W
<b>Dimensions of main unit (W x H x D)</b>	260 x 324 x 346 mm
<b>Weight of main unit</b>	5.7 kg

• Design and specifications are subject to change without notice.

## SPECIFICATIONS <U>

### <FM tuner section>

<b>Tuning range</b>	87.5 MHz to 108 MHz
<b>Usable sensitivity (IHF)</b>	13.2 dBf
<b>Antenna terminals</b>	75 ohms (unbalanced)

### <AM tuner section>

<b>Tuning range</b>	530 kHz to 1710 kHz (10 kHz step) 531 kHz to 1602 kHz (9 kHz step)
<b>Usable sensitivity</b>	350 $\mu$ V/m
<b>Antenna</b>	Loop antenna

### <Amplifier section>

<b>Power output</b>	Rated 10 W + 10 W (50 Hz to 20 kHz, T.H.D. 1 %, 6 ohms) Reference 15 W + 15 W (1 kHz, T.H.D. 10 %, 6 ohms)
<b>Total harmonic distortion</b>	0.1 % (6 W, 1 kHz, 6 ohms, DIN AUDIO)
<b>Inputs</b>	VIDEO/AUX: 500 mV
<b>Outputs</b>	SPEAKERS: accept speakers of 6 ohms or more PHONES (stereo jack): accepts headphones of 32 ohms or more

### <Cassette deck section>

<b>Track format</b>	4 tracks, 2 channels stereo
<b>Frequency response</b>	50 Hz – 8000 Hz
<b>Recording system</b>	AC bias
<b>Heads</b>	Deck 1 : Recording/playback head x 1, erase head x 1 Deck 2 : Playback head x 1

### <Compact disc player section>

<b>Laser</b>	Semiconductor laser ( $\lambda$ = 780 nm)
<b>D-A converter</b>	1 bit dual
<b>Signal-to-noise ratio</b>	85 dB (1 kHz, 0 dB)
<b>Harmonic distortion</b>	0.05 % (1 kHz, 0 dB)

### <Speaker system SX-NAJ12>

<b>Speaker System</b>	2 way, bass reflex (magnetic shielded type)
<b>Speaker units</b>	Woofer: 120 mm cone type Tweeter: 20mm ceramic type
<b>Impedance</b>	6 ohms
<b>Sensitivity</b>	86 dB/W/m
<b>Dimensions (W x H x D)</b>	220 x 324 x 235 mm
<b>Weight</b>	2.0 kg

### <General>

<b>Power requirements</b>	120 V AC, 60 Hz
<b>Power consumption</b>	38 W
<b>Power consumption in standby mode</b>	With power-economizing mode off : 8.0 W With power-economizing mode on : 0.9 W
<b>Dimensions of main unit (W x H x D)</b>	260 x 324 x 346 mm
<b>Weight of main unit</b>	5.7 kg


• Design and specifications are subject to change without notice.

# PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

## WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

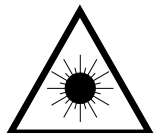

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

## VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylitävälle näkymättömälle lasersäteilylle.

## WARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvisning, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## ATTENTION


L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

## ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.


The CLASS 1 LASER PRODUCT label is located on the rear exterior.

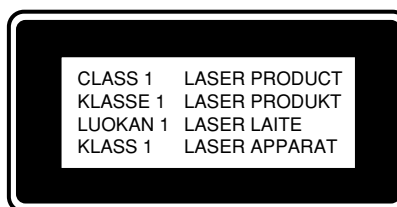

## Precaution to replace Optical block (KSM-880CAB)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

- 1) After the connection, remove solder shown in the right figure.

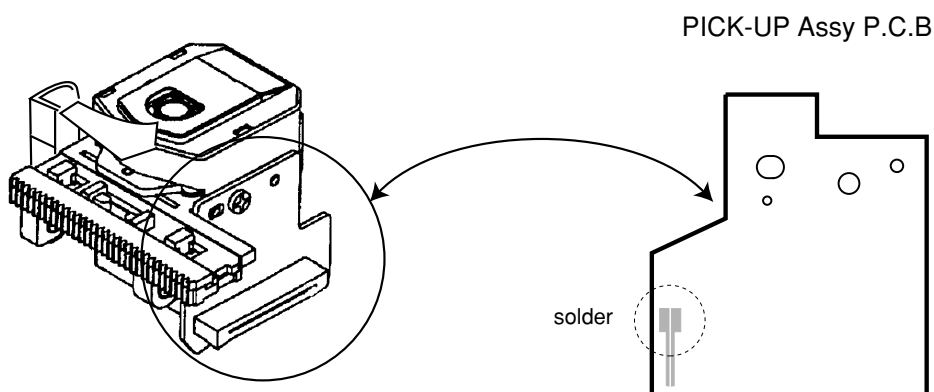

## NOTE ON BEFORE STARTING REPAIR

### 1. Forced discharge of electrolytic capacitor of power supply block

When repair is going to be attempted in the set that uses relay circuit in the power supply block, electric potential is kept charged across the electrolytic capacitors (C101, 102) even though AC power cord is removed. If repair is attempted in this condition, secondary defect can occur.

In order to prevent the secondary trouble, perform the following measures before starting repair work.

#### Discharge procedure

- ① Remove the AC power cord.
- ② Connect a discharging resistor at an end of lead wire that has clips at both ends. Connect the other end of the lead wire to metal chassis.
- ③ Contact the other end of the discharging resistor to the positive (+) side (+VH) of C101. (For two seconds)
- ④ Contact the same end of the discharging resistor as step ③ to the negative (-) side (-VH) of C102 in the same way. (For two seconds)
- ⑤ Check that voltage across C101 and C102 has decreased to 1 V or less using a multimeter or an oscilloscope.

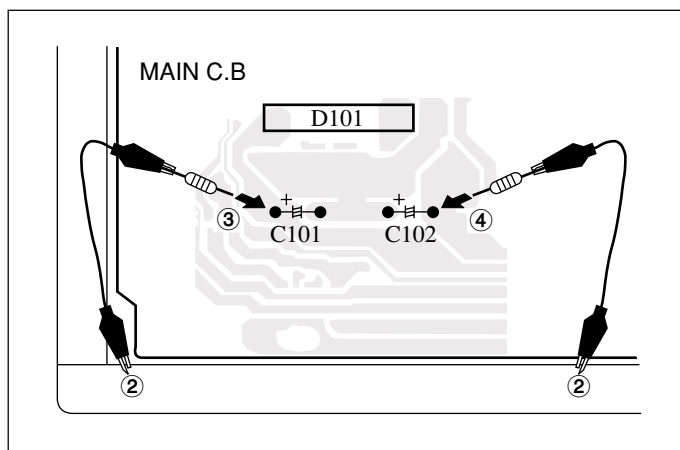


Fig-1

Select a discharging resistor referring to the following table.

Charging voltage (V) (C101, 102)	Discharging resistor ( $\Omega$ )	Rated power (W)	Parts number
25-48	100	3	87-A00-247-090
49-140	220	5	87-A00-232-090

**Note:** The reference numbers (C101, C102) of the electrolytic capacitors can change depending on the models. Be sure to check the reference numbers of the charging capacitors on schematic diagram before starting the discharging work.

### 2. Check items before exchanging the MICROCOMPUTER

Be sure to check the following items before exchanging the MICROCOMPUTER. Exchange the MICROCOMPUTER after confirming that the MICROCOMPUTER is surely defective.

#### 2-1. Regarding the HOLD terminal of the MICROCOMPUTER

When the HOLD terminal (INPUT) of the MICROCOMPUTER is “H”, the MICROCOMPUTER is judged to be operating correctly. When this terminal is “L”, the main power cannot be turned on. Therefore, be sure to check the terminal voltage of the HOLD terminal before exchange.

When the MICROCOMPUTER is not defective, the HOLD terminal can also go “L” when the POWER AMPLIFIER has any abnormalities that triggers the abnormality detection circuit on the MAIN C. B. that sets the HOLD terminal to “L”.

#### • Good or no good judgement of the MICROCOMPUTER

- ① Turn on the AC main power.
- ② Confirm that the main power is turned on and the HOLD terminal of the MICROCOMPUTER keeps the “H” level or not.
- ③ When the HOLD terminal is “L” level, the abnormality detection circuit is judged to be working correctly and the MICROCOMPUTER is judged to be good.

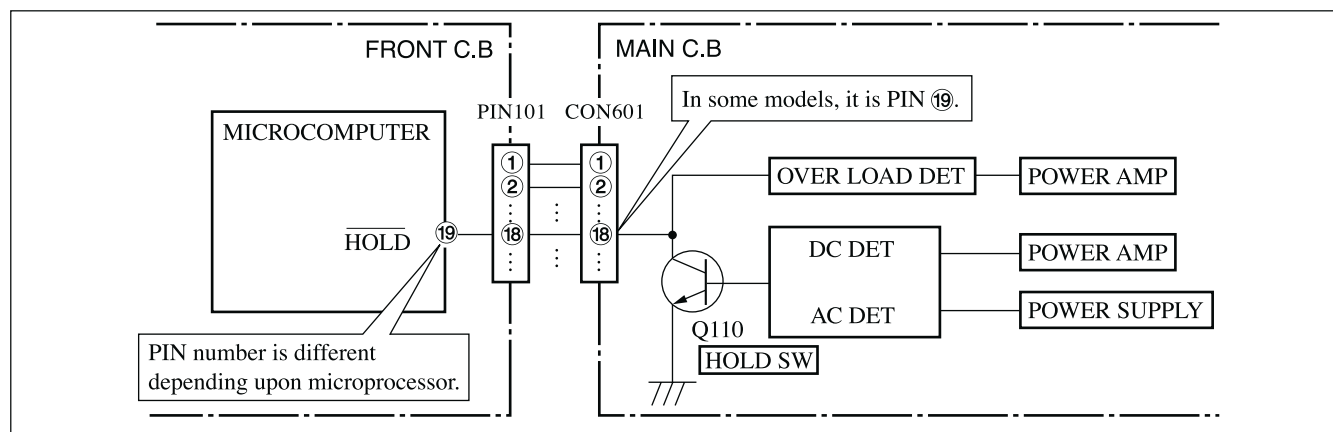


Fig-2-1

In such a case, check also if the POWER AMPLIFIER circuit or power supply circuit has any abnormalities or not.

## 2-2. Regarding reset

There are cases that the machine does not work correctly because the MICROCOMPUTER is not reset even though the AC power cord is re-inserted, or the software reset (pressing the STOP key + POWER key) is performed.

When the above described phenomenon occurs, it can lead to wrong judgement as if the MICROCOMPUTER is defective and to exchange the MICROCOMPUTER. In such a case, perform the forced-reset by the following procedure and check good or no good of the MICROCOMPUTER.

- ① Remove the AC power cord.

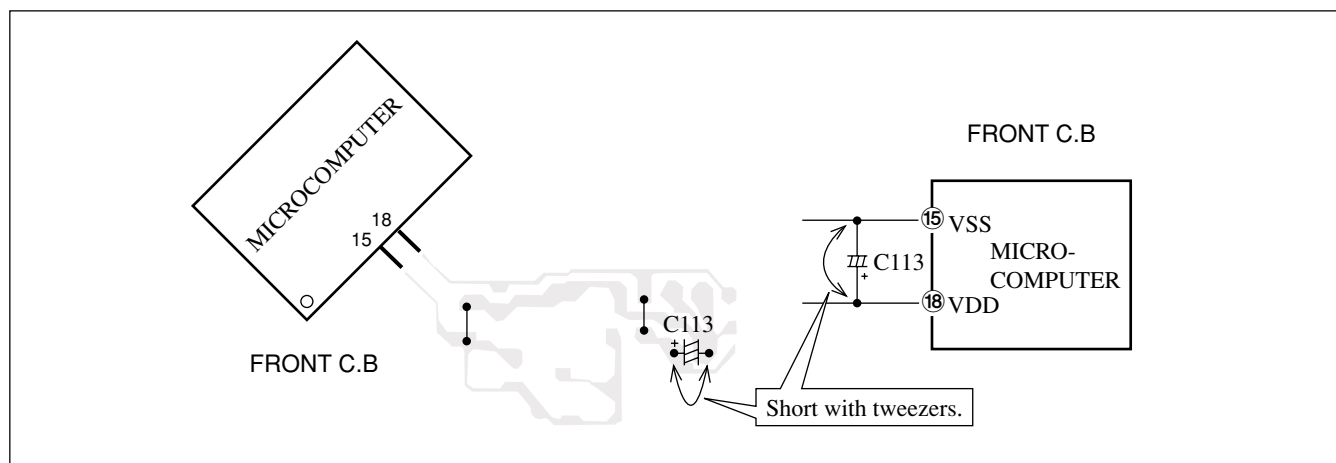


Fig-2-2

- ② Short both ends of the electrolytic capacitor C113 that is connected to VDD of the MICROCOMPUTER with tweezers.
- ③ Connect the AC power cord again. If the MICROCOMPUTER returns to the normal operation, the MICROCOMPUTER is good.

**Note:** The reference number or MICROCOMPUTER pin number of transistor (Q110) and electrolytic capacitor (C113) can change depending on the models. Be sure to check the reference numbers on schematic diagram before starting the discharging work.

## 2-3. Confirmation of soldering state of MICROCOMPUTER

Check the soldering state of the MICROCOMPUTER in addition to the above described procedures. Be sure to exchange the MICROCOMPUTER after surely confirming that the trouble is not caused by poor soldering but the MICROCOMPUTER itself.

# ELECTRICAL MAIN PARTS LIST

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
IC				C26	87-010-406-080		CAP, ELECT 22-50<U>
	8A-MA6-651-010		C-IC,M38B59MFH-E250FP<U,LH>	C30	87-010-247-080		CAP, ELECT 100-50V<LH,HA>
	8A-NFA-615-010		C-IC,M38B57MCH-E236FP<HA>	C30	87-010-384-080		CAP, ELECT 100-25 M 11L SME<U>
	87-A21-397-010		IC,STK490-070<LH,HA>	C31	87-010-263-080		CAP, ELECT 100-10V
	87-A21-419-040		C-IC,NJM14558MD-TE2	C32	87-010-197-080		CAP, CHIP 0.01 DM
	87-A21-443-040		C-IC,M62495AFP				
	87-A21-415-010		IC,LA1843	C33	87-010-263-080		CAP, ELECT 100-10V<U>
	87-070-127-110		IC,LC72131 D	C34	87-010-247-080		CAP, ELECT 100-50V
	87-A21-482-010		IC,RPM6938-H4	C35	87-010-406-080		CAP, ELECT 22-50
				C36	87-010-381-080		CAP, ELECT 330-16V
				C38	87-A11-567-080		C-CAP,S 0.01-50 K B
TRANSISTOR				C50	87-010-384-080		CAP, ELECT 100-25 M 11L SME<U>
	87-026-609-080		TR,KTA1266GR	C60	87-010-403-080		CAP, ELECT 3.3-50V
	89-213-702-010		TR,2SB1370 (1.8W)	C97	87-010-196-080		CHIP CAPACITOR,0.1-25<LH,HA>
	87-026-610-080		TR,KTC3198GR	C100	87-018-127-080		CAP TC-U 470P
	87-A30-076-080		C-TR,2SC3052F	C101	87-010-183-080		C-CAP,S 2700P-50 B<LH,HA>
	87-A30-075-080		C-TR,2SA1235F				
	87-A30-255-010		C-TR,2SB1342<U>	C101	87-010-185-080		C-CAP,S 3900P-50 KB<U>
	87-A30-256-010		TR,2SD1933<U>	C102	87-010-183-080		C-CAP,S 2700P-50 B<LH,HA>
	87-A30-190-080		TR,CC5551<U>	C102	87-010-185-080		C-CAP,S 3900P-50 KB<U>
	87-026-245-080		TR,DTC114ES<LH,HA>	C103	87-010-545-080		CAP, ELECT 0.22-50V
	87-A30-198-080		TR,KTC3199GR<LH,HA>	C104	87-010-545-080		CAP, ELECT 0.22-50V
	87-A30-090-080		FET,2SK2541				
	87-A30-484-080		C-TR,KRA102S	C105	87-010-178-080		CHIP CAP 1000P<LH,HA>
	87-A30-468-080		C-TR,KRC102S-RTK	C105	87-010-186-080		CAP,CHIP 4700P<U>
	87-A30-107-070		C-TR,CMBT5401<LH,HA>	C106	87-010-178-080		CHIP CAP 1000P<LH,HA>
	87-A30-106-040		C-TR,CMBT5551<LH,HA>	C106	87-010-186-080		CAP,CHIP 4700P<U>
	87-A30-091-080		FET,2SJ460	C107	87-010-404-080		CAP, ELECT 4.7-50V<LH,HA>
	87-A30-062-080		C-TR,KRC104S				
	87-A30-318-080		TR,CSA952K<HA>	C107	87-010-403-080		CAP, ELECT 3.3-50V<U>
	89-333-317-880		TR,2SC3331 (0.5W)	C108	87-010-404-080		CAP, ELECT 4.7-50V<LH,HA>
	87-A30-234-080		TR,CSC4115BC	C108	87-010-403-080		CAP, ELECT 3.3-50V<U>
	89-327-143-080		TR,2SC2714 (0.1W)	C111	87-010-391-080		CAP,E 10-35 SME<LH,HA>
	87-A30-489-080		C-TR,KRA107S	C111	87-010-406-080		CAP, ELECT 22-50<U>
DIODE							
	87-A40-736-080		DIODE,1N4148M (SEM)<U,LH>	C112	87-010-391-080		CAP,E 10-35 SME<LH,HA>
	87-020-465-080		DIODE,1SS133 (110MA)<HA>	C112	87-010-406-080		CAP, ELECT 22-50<U>
	87-A40-455-080		DIODE,RL203 GW<LH,HA>	C113	87-010-405-080		CAP, ELECT 10-50V<LH,HA>
	87-A40-553-080		DIODE,1N4003 LES	C113	87-012-156-080		C-CAP, S 220P-50 J CH<U>
	87-A40-774-080		ZENER,UZ24BSD	C114	87-010-405-080		CAP, ELECT 10-50V<LH,HA>
	87-A40-764-080		ZENER,UZ10BSC				
	87-A40-313-080		C-DIODE,MC 2840<LH,HA>	C114	87-012-156-080		C-CAP, S 220P-50 J CH<U>
	87-A40-270-080		C-DIODE,MC2838	C119	87-010-197-080		CAP, CHIP 0.01 DM
	87-A40-269-080		C-DIODE,MC2836	C120	87-010-197-080		CAP, CHIP 0.01 DM
	87-A40-768-080		ZENER,UZ16BSA<LH,HA>	C125	87-012-368-080		C-CAP,S 0.1-50 F<LH,HA>
	87-A40-752-080		ZENER,UZ6.2BSC	C125	87-010-196-080		CHIP CAPACITOR,0.1-25<U>
	87-A40-739-080		ZENER,UZ2.7BSA				
	87-017-149-080		ZENER,HZS6A2L	C126	87-012-368-080		C-CAP,S 0.1-50 F<LH,HA>
	87-A40-535-080		DIODE,1N5393-GOODARK<U>	C126	87-010-196-080		CHIP CAPACITOR,0.1-25<U>
MAIN C.B				C127	87-012-368-080		C-CAP,S 0.1-50 F<LH,HA>
C3	87-010-196-080		CHIP CAPACITOR,0.1-25<LH,HA>	C127	87-010-196-080		CHIP CAPACITOR,0.1-25<U>
C4	87-010-196-080		CHIP CAPACITOR,0.1-25<LH,HA>	C128	87-012-368-080		C-CAP,S 0.1-50 F<LH,HA>
C5	87-010-196-080		CHIP CAPACITOR,0.1-25<LH,HA>				
C6	87-010-196-080		CHIP CAPACITOR,0.1-25<LH,HA>	C128	87-010-196-080		CHIP CAPACITOR,0.1-25<U>
C9	87-010-196-080		CHIP CAPACITOR,0.1-25	C128	87-012-368-080		C-CAP,S 0.1-50 F<LH,HA>
C10	87-010-196-080		CHIP CAPACITOR,0.1-25				
C11	87-010-196-080		CHIP CAPACITOR,0.1-25	C128	87-010-196-080		CHIP CAPACITOR,0.1-25<U>
C12	87-010-196-080		CHIP CAPACITOR,0.1-25	C129	87-A10-592-080		C-CAP,S 0.015-50 K B<LH,HA>
C19	87-A10-627-000		CAP,E 2200-50 M SMG<LH,HA>	C130	87-A10-592-080		C-CAP,S 0.015-50 K B<LH,HA>
C20	87-A10-627-000		CAP,E 2200-50 M SMG<LH,HA>	C131	87-010-197-080		CAP, CHIP 0.01 DM<LH,HA>
C21	87-016-495-000		CAP,E 3300-25 M SMG	C132	87-010-197-080		CAP, CHIP 0.01 DM<LH,HA>
C22	87-016-495-000		CAP,E 3300-25 M SMG<LH,HA>				
C22	87-A10-011-090		CAP,E 2200-25 SMG<U>	C133	87-010-186-080		CAP,CHIP 4700P
C25	87-010-385-080		CAP, ELECT 220-25V<LH,HA>	C140	87-010-182-080		C-CAP,S 2200P-50 B
C25	87-010-407-080		CAP, ELECT 33-50 M 11L SME<U>	C183	87-010-387-080		CAP,E 470-25 SME<U>
C26	87-010-247-080		CAP, ELECT 100-50V<LH,HA>	C184	87-010-403-080		CAP, ELECT 3.3-50V<U>
				C200	87-018-195-080		CAP TC-U 1200P
				C300	87-018-195-080		CAP TC-U 1200P
				C301	87-010-179-080		CAP,CHIP S B1200P
				C302	87-010-179-080		CAP,CHIP S B1200P
				C303	87-010-178-080		CHIP CAP 1000P
				C304	87-010-178-080		CHIP CAP 1000P
				C305	87-010-198-080		CAP, CHIP 0.022
				C307	87-010-263-080		CAP, ELECT 100-10V
				C308	87-010-263-080		CAP, ELECT 100-10V
				C311	87-010-598-080		C-CAP,S 0.068-16VRK
				C312	87-010-598-080		C-CAP,S 0.068-16VRK
				C313	87-010-188-080		CAP,CHIP 6800P
				C314	87-010-188-080		CAP,CHIP 6800P
				C315	87-010-263-080		CAP, ELECT 100-10V
				C317	87-010-546-080		CAP, ELECT 0.33-50V
				C318	87-010-546-080		CAP, ELECT 0.33-50V



REF.NO.	PART NO.	KANRI NO.	DESCRIPTION	REF.NO.	PART NO.	KANRI NO.	DESCRIPTION
C108	87-010-178-080		CHIP CAP 1000P	WH181	87-A90-460-010		HLDR,WIRE 2.5-7P<U>
C109	87-012-369-080		C-CAP,S 0.047-50F				
C110	87-010-197-080		CAP, CHIP 0.01 DM				
C111	87-010-196-080		CHIP CAPACITOR,0.1-25				
C113	87-010-178-080		CHIP CAP 1000P				
C114	87-010-154-080		CAP CHIP 10P				
C115	87-010-175-080		CAP 560P				
C116	87-010-400-040		CAP,E 0.47-50				
C117	87-016-460-080		C-CAP,S 0.22-16 B				
C118	87-A10-189-040		CAP,E 220-10				
C119	87-A10-189-040		CAP,E 220-10				
C120	87-012-156-080		C-CAP,S 220P-50 CH				
C123	87-010-196-080		CHIP CAPACITOR,0.1-25				
C124	87-010-196-080		CHIP CAPACITOR,0.1-25				
C125	87-010-405-040		CAP,E 10-50				
C126	87-010-196-080		CHIP CAPACITOR,0.1-25				
C129	87-010-374-040		CAP,E 47-10				
C210	87-012-156-080		C-CAP,S 220P-50 CH				
C212	87-010-404-040		CAP,E 4.7-50 SME				
C213	87-010-404-040		CAP,E 4.7-50 SME				
C701	87-010-384-040		CAP,E 100-25 SME				
CN101	87-099-720-010		CONN,30P TYK-B(P)				
CN701	87-A60-673-010		CONN,9P H 2MM JMT				
CN801	87-099-015-010		CONN,13P 6216V<HA>				
CN801	87-A60-055-010		CONN,13P 9604V<U,LH>				
FL201	8A-NFA-604-010		FL,10-BT-224GNK				
L101	87-A50-050-010		COIL,CLK 4.19M(COI)				
LED101	87-A40-317-080		LED,SLR-342VCT31 RED				
S101	87-A91-555-010		SW,RTRY EC12E24504				
S301	87-A90-164-080		SW,TACT SKQAB(N)				
S302	87-A90-164-080		SW,TACT SKQAB(N)				
S303	87-A90-164-080		SW,TACT SKQAB(N)				
S304	87-A90-164-080		SW,TACT SKQAB(N)				
S305	87-A90-164-080		SW,TACT SKQAB(N)				
S306	87-A90-164-080		SW,TACT SKQAB(N)				
S307	87-A90-164-080		SW,TACT SKQAB(N)				
S308	87-A90-164-080		SW,TACT SKQAB(N)				
S309	87-A90-164-080		SW,TACT SKQAB(N)				
S321	87-A90-164-080		SW,TACT SKQAB(N)				
S322	87-A90-164-080		SW,TACT SKQAB(N)				
S323	87-A90-164-080		SW,TACT SKQAB(N)				
S324	87-A90-164-080		SW,TACT SKQAB(N)				
S325	87-A90-164-080		SW,TACT SKQAB(N)				
S326	87-A90-164-080		SW,TACT SKQAB(N)				
S327	87-A90-164-080		SW,TACT SKQAB(N)				
S328	87-A90-164-080		SW,TACT SKQAB(N)				
S329	87-A90-164-080		SW,TACT SKQAB(N)				
S330	87-A90-164-080		SW,TACT SKQAB(N)				
S331	87-A90-164-080		SW,TACT SKQAB(N)				
SFR701	87-024-431-080		SFR,3.3K RH063EC<HA>				
SFR701	87-024-351-080		SFR,3.3K DJAA03<U,LH>				
PT C.B							
C1	87-010-387-080		CAP,E 470-25 SME<LH,HA>				
C31	87-010-403-080		CAP, ELECT 3.3-50V<LH,HA>				
C183	87-010-387-080		CAP, ELECT 470-25 M<U>				
C184	87-010-403-080		CAP, ELECT 3.3-50V<U>				
CN1	87-A61-110-010		CONN,9P V TID-A<LH,HA>				
△ PT1	8A-NFA-609-010		PT,ANF-A LH<LH,HA>				
△ PT1	8A-NFA-607-010		PT,ANF-A U<U>				
△ PT2	8A-NF8-673-010		PT,SUB ANF-8 (H) KAMI<LH,HA>				
△ PT181	8A-NF8-661-010		PT,SUB ANF-8 (U) <U>				
△ RY1	87-A91-281-010		RELAY,AC DC12V OSA-SS-212DM5<LH,HA>				
△ RY181	87-A90-976-010		RELAY,AC12V SDT-S-112LMR<U>				
△ S1	87-A90-165-010		SW,SL 1-2-3 SWS2301<LH,HA>				
△ T1	87-A60-317-010		TERMINAL, 1P MSC<LH,HA>				
△ T2	87-A60-317-010		TERMINAL, 1P MSC<LH,HA>				
△ T181	87-A60-317-010		TERMINAL, 1P MSC<U>				
△ T182	87-A60-317-010		TERMINAL, 1P MSC<U>				




TRANSISTOR ILLUSTRATION



E C B

CSA952  
CSC4115  
KTA1266  
KTC3198  
KTC3199

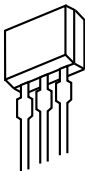


S D G

2SJ460  
2SK2541



E C B

DTC114ES

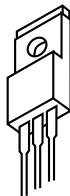

B C E

2SB1370  
2SB1342  
2SD1933




B C E

2SC3331



E B C

CC5551

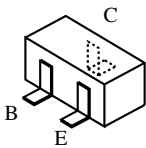

2SA1235    KRA102  
2SC2714    KRA107  
2SC3052    KRC102  
CMBT5401   KRC104  
CMBT5551

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち

Chip Resistor Part Coding



A  
抵抗部品コード  
Resistor Code

桁表示  
Figure  
抵抗値  
Value of resistor


チップ抵抗  
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード Resistor Code : A
				外形／Form	L	W	t	
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128






SCHEMATIC DIAGRAM - 1 (MAIN : 1 / 2) <U>

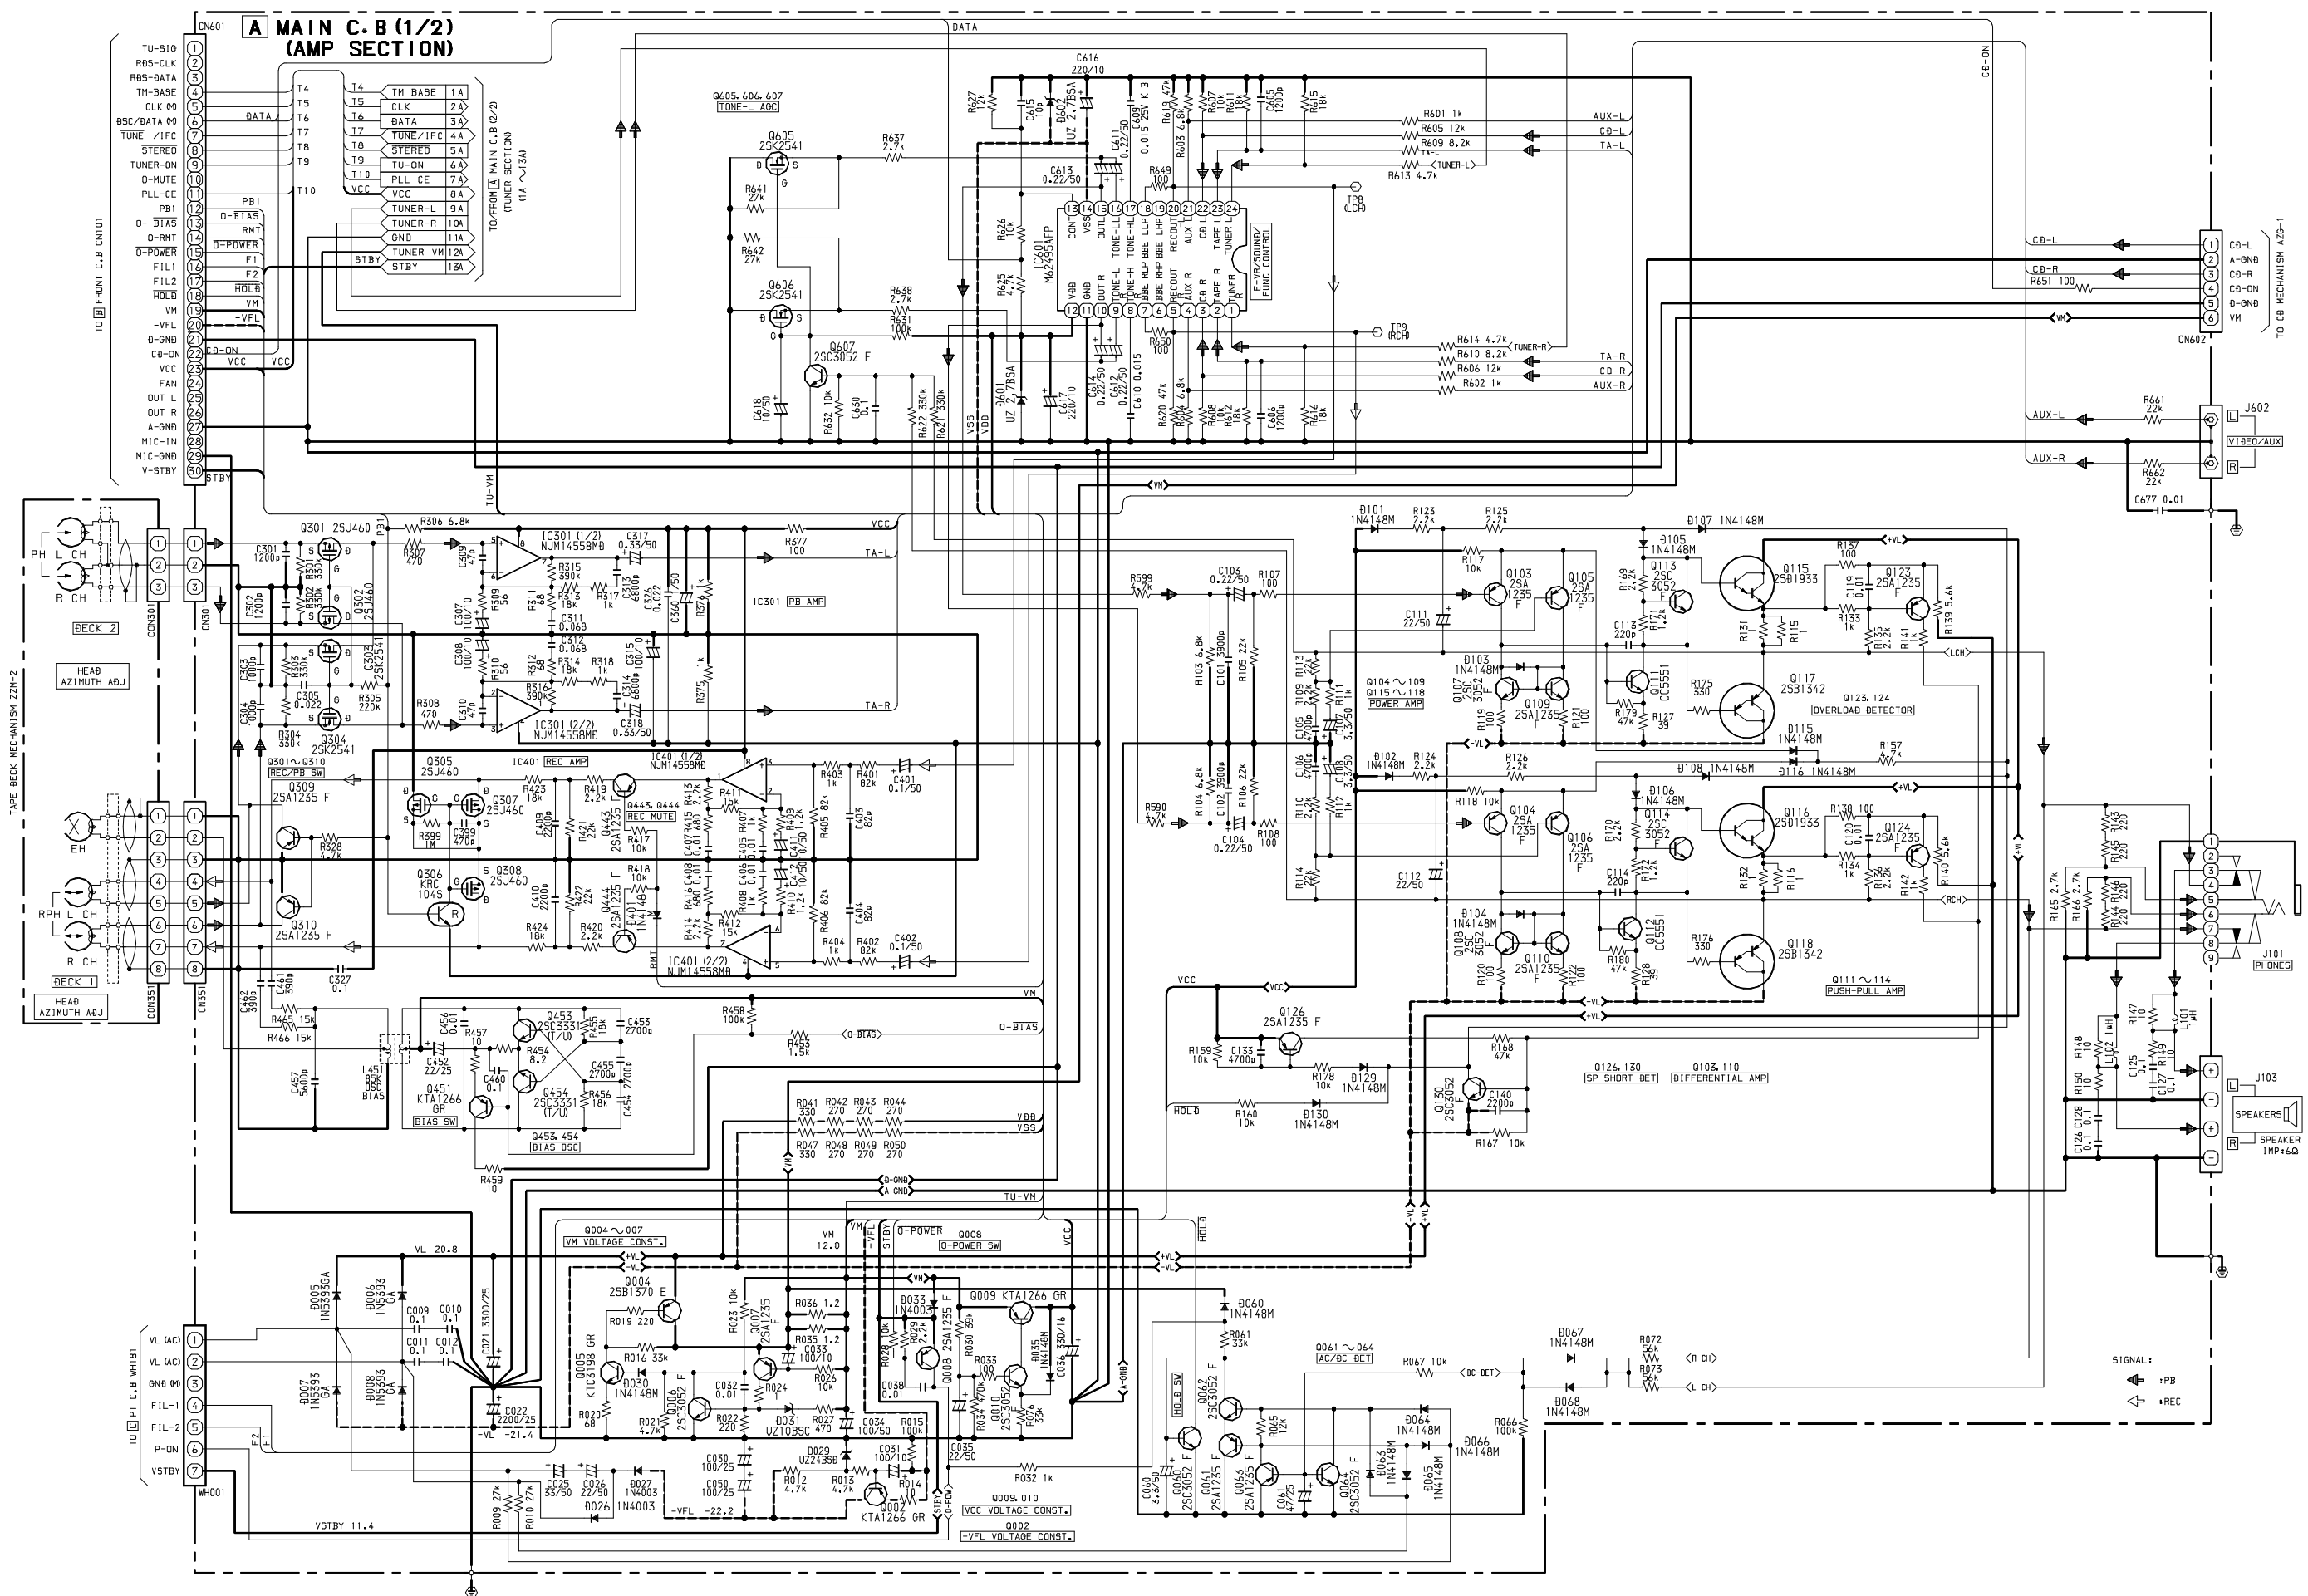







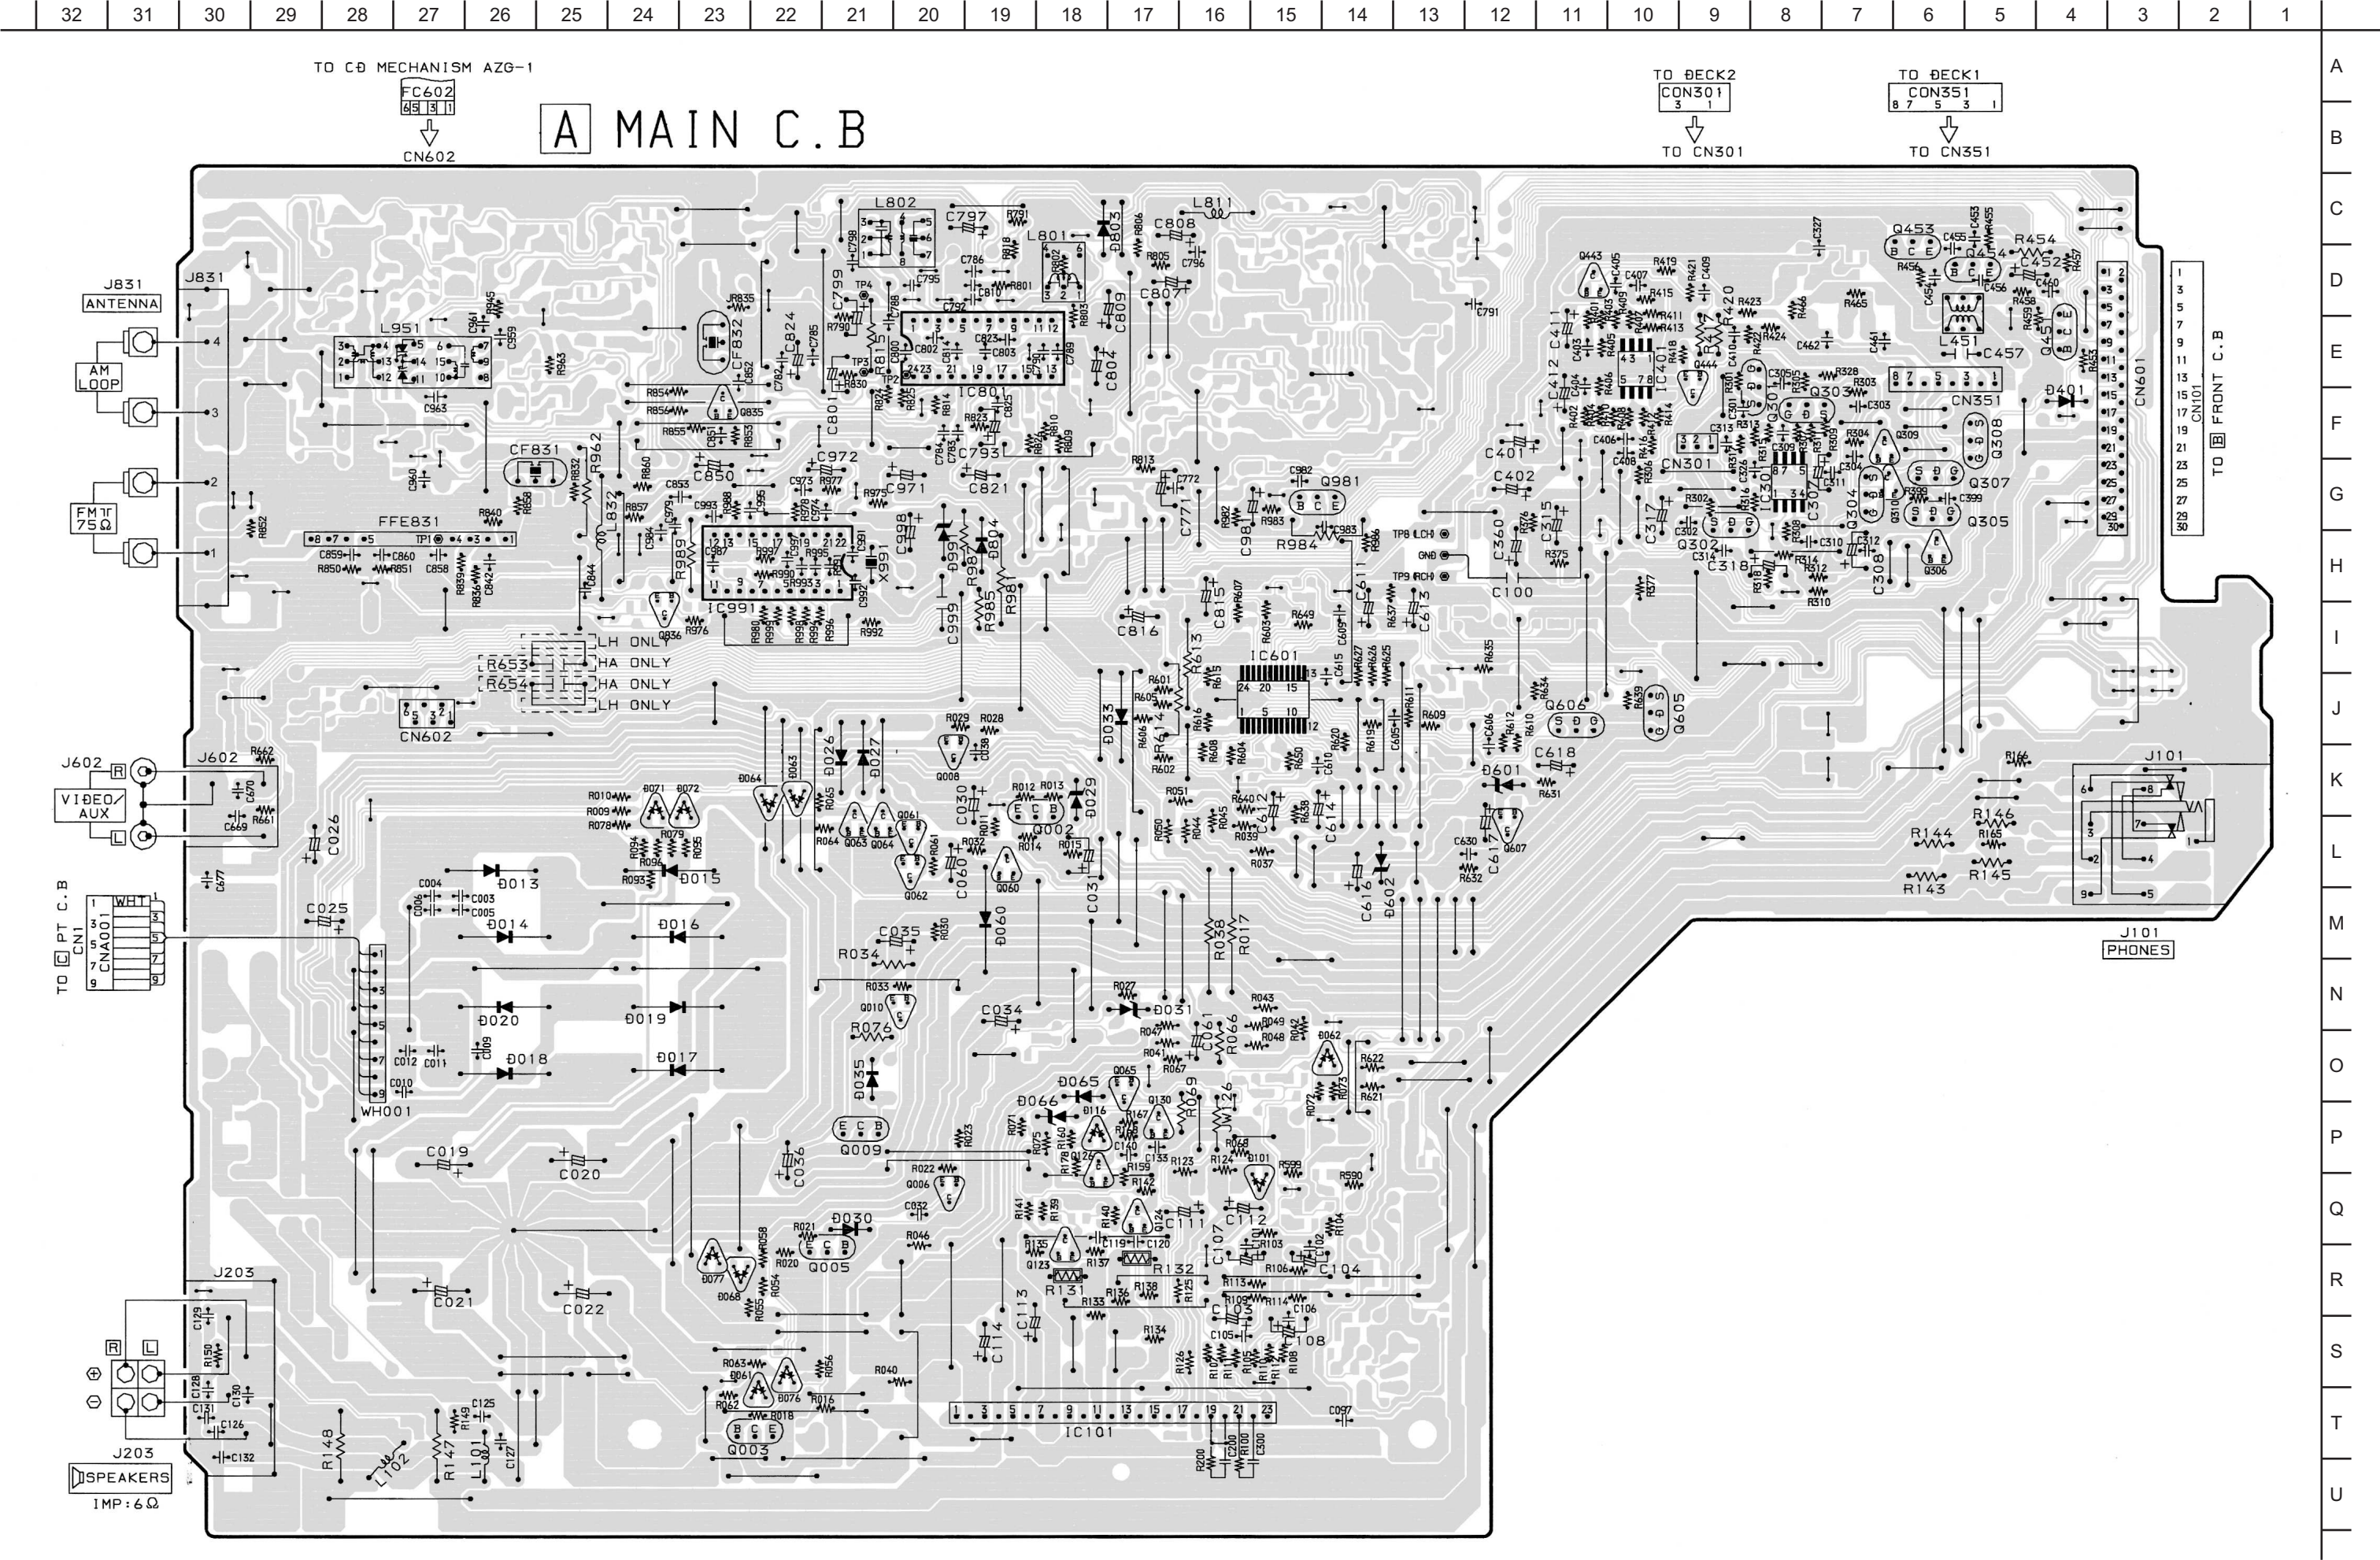




SCHEMATIC DIAGRAM - 3 (MAIN : 1 / 2) <HA,LH>

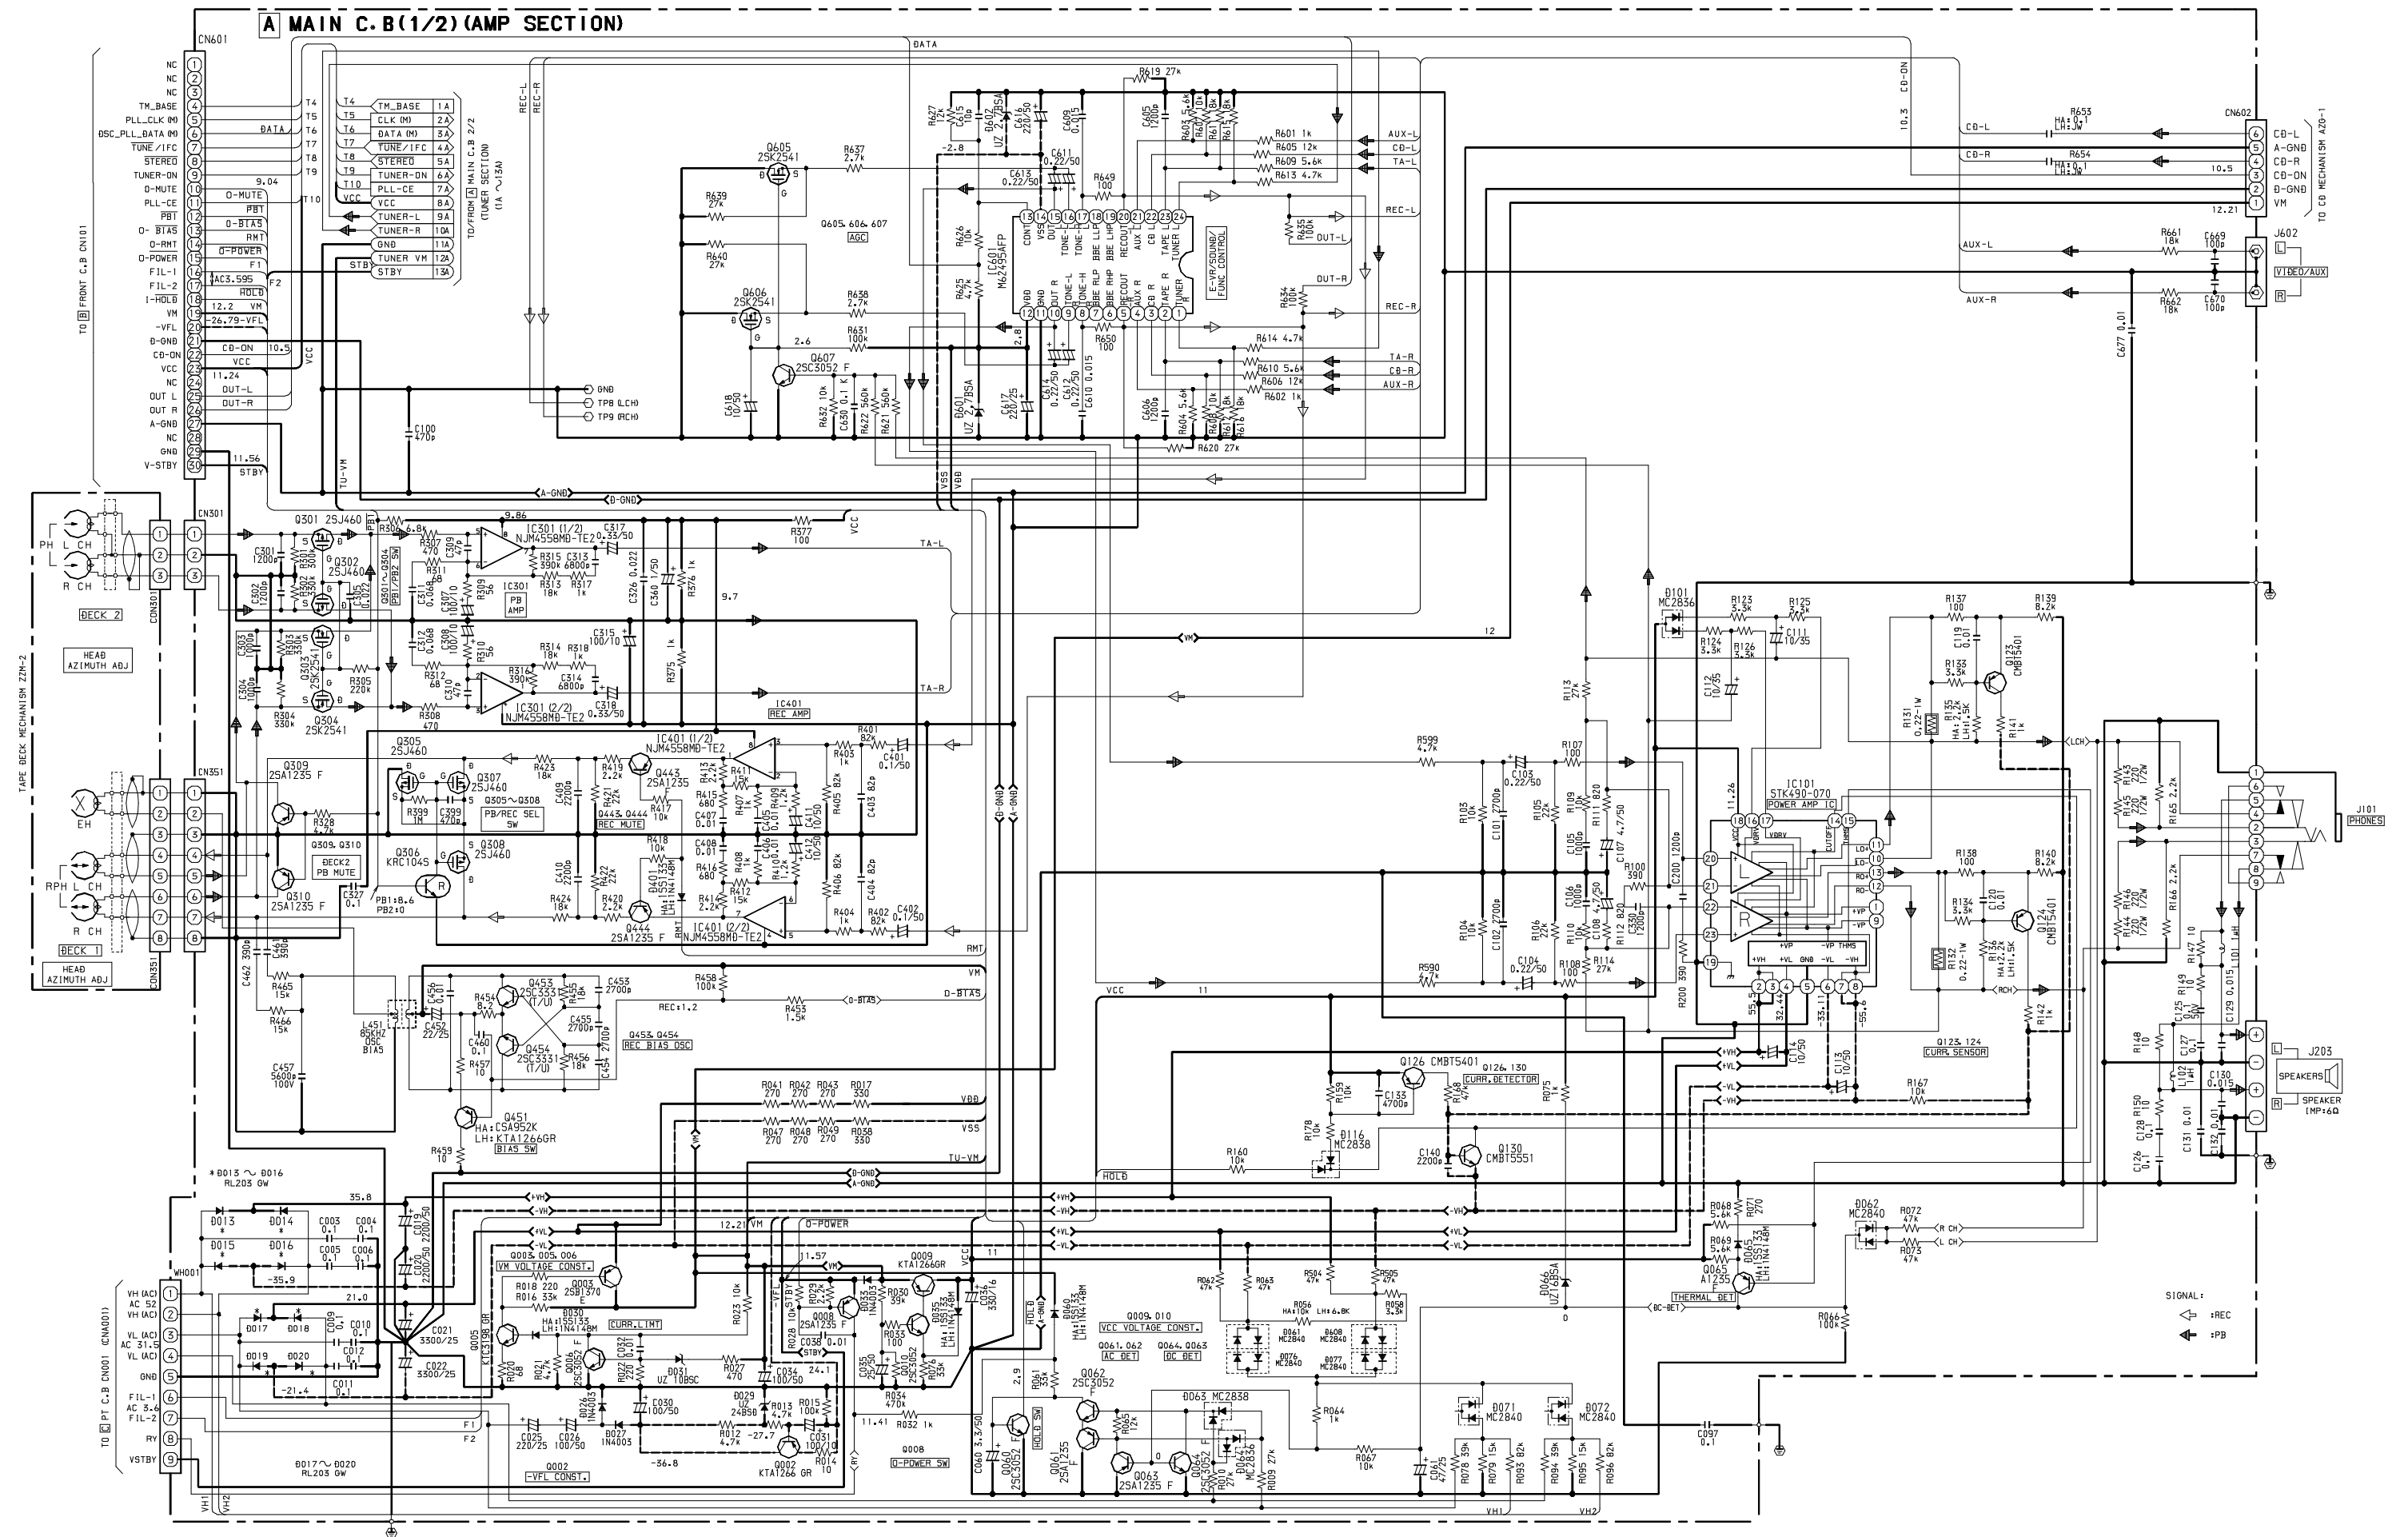

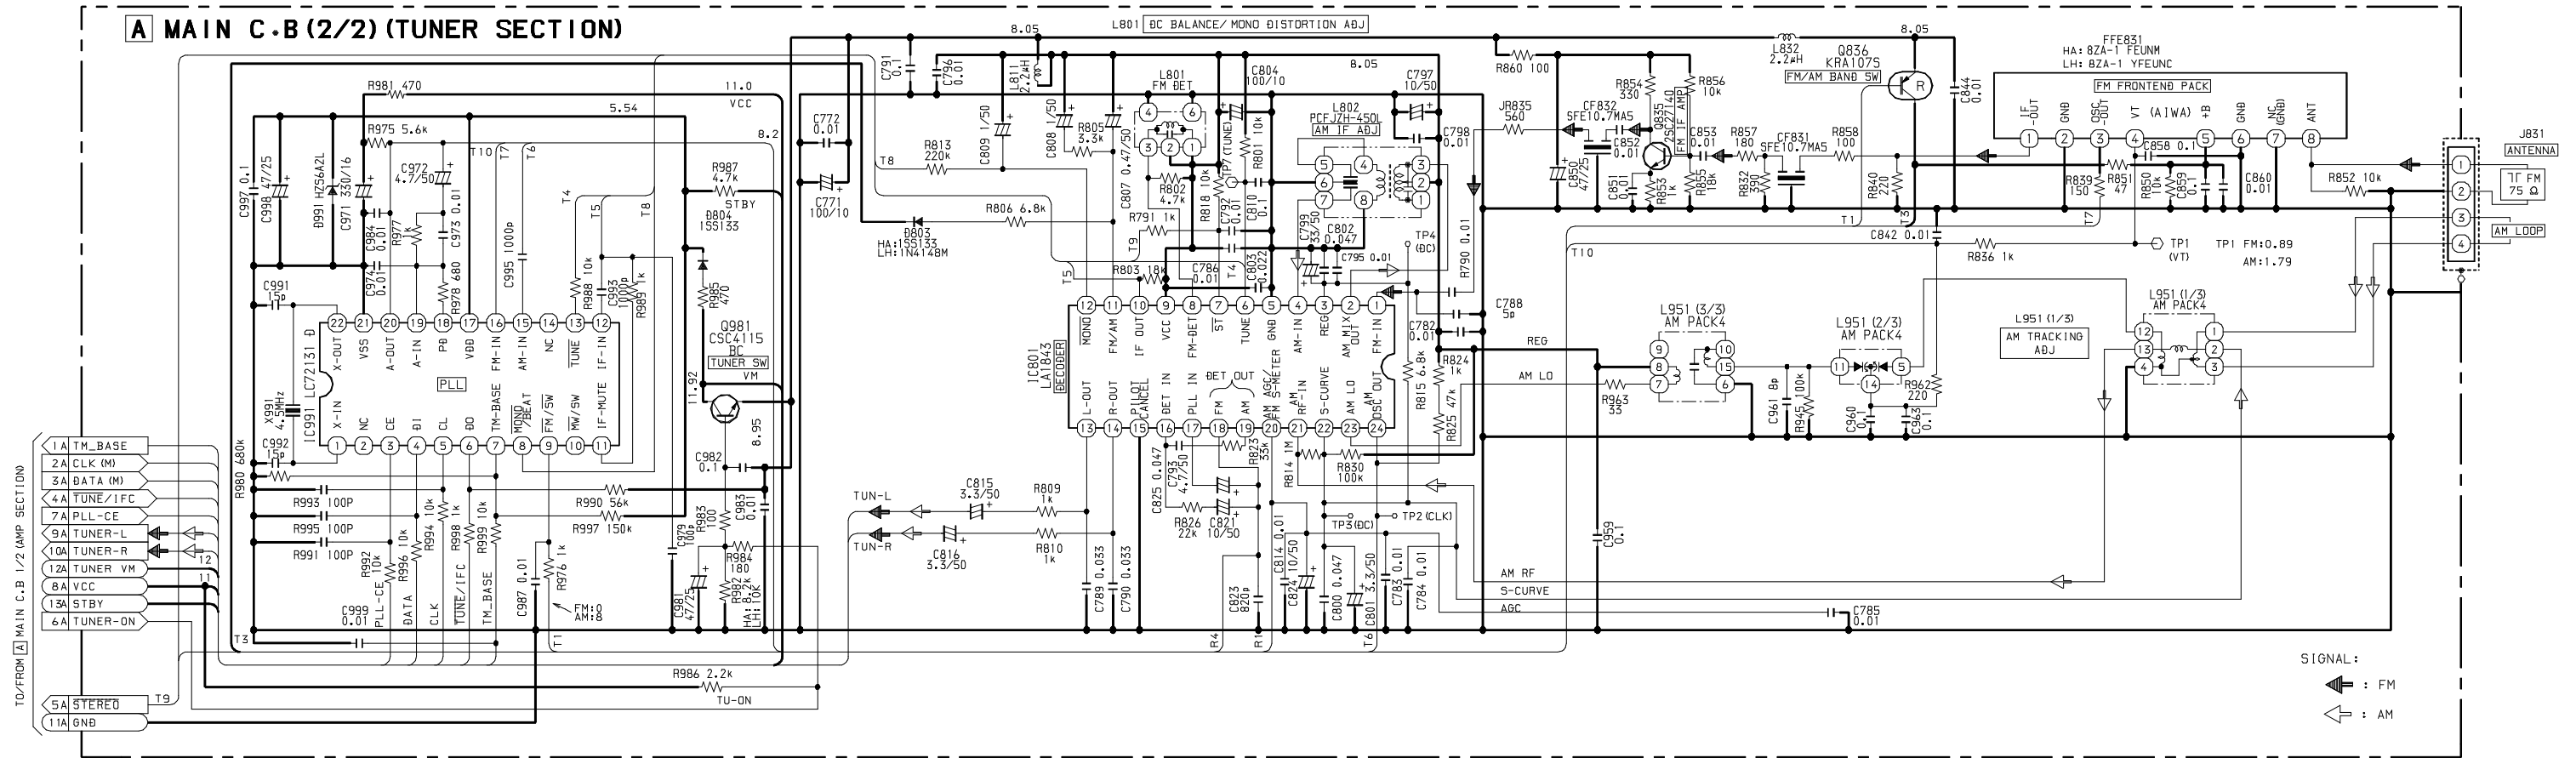


WIRING-3 (FRONT)

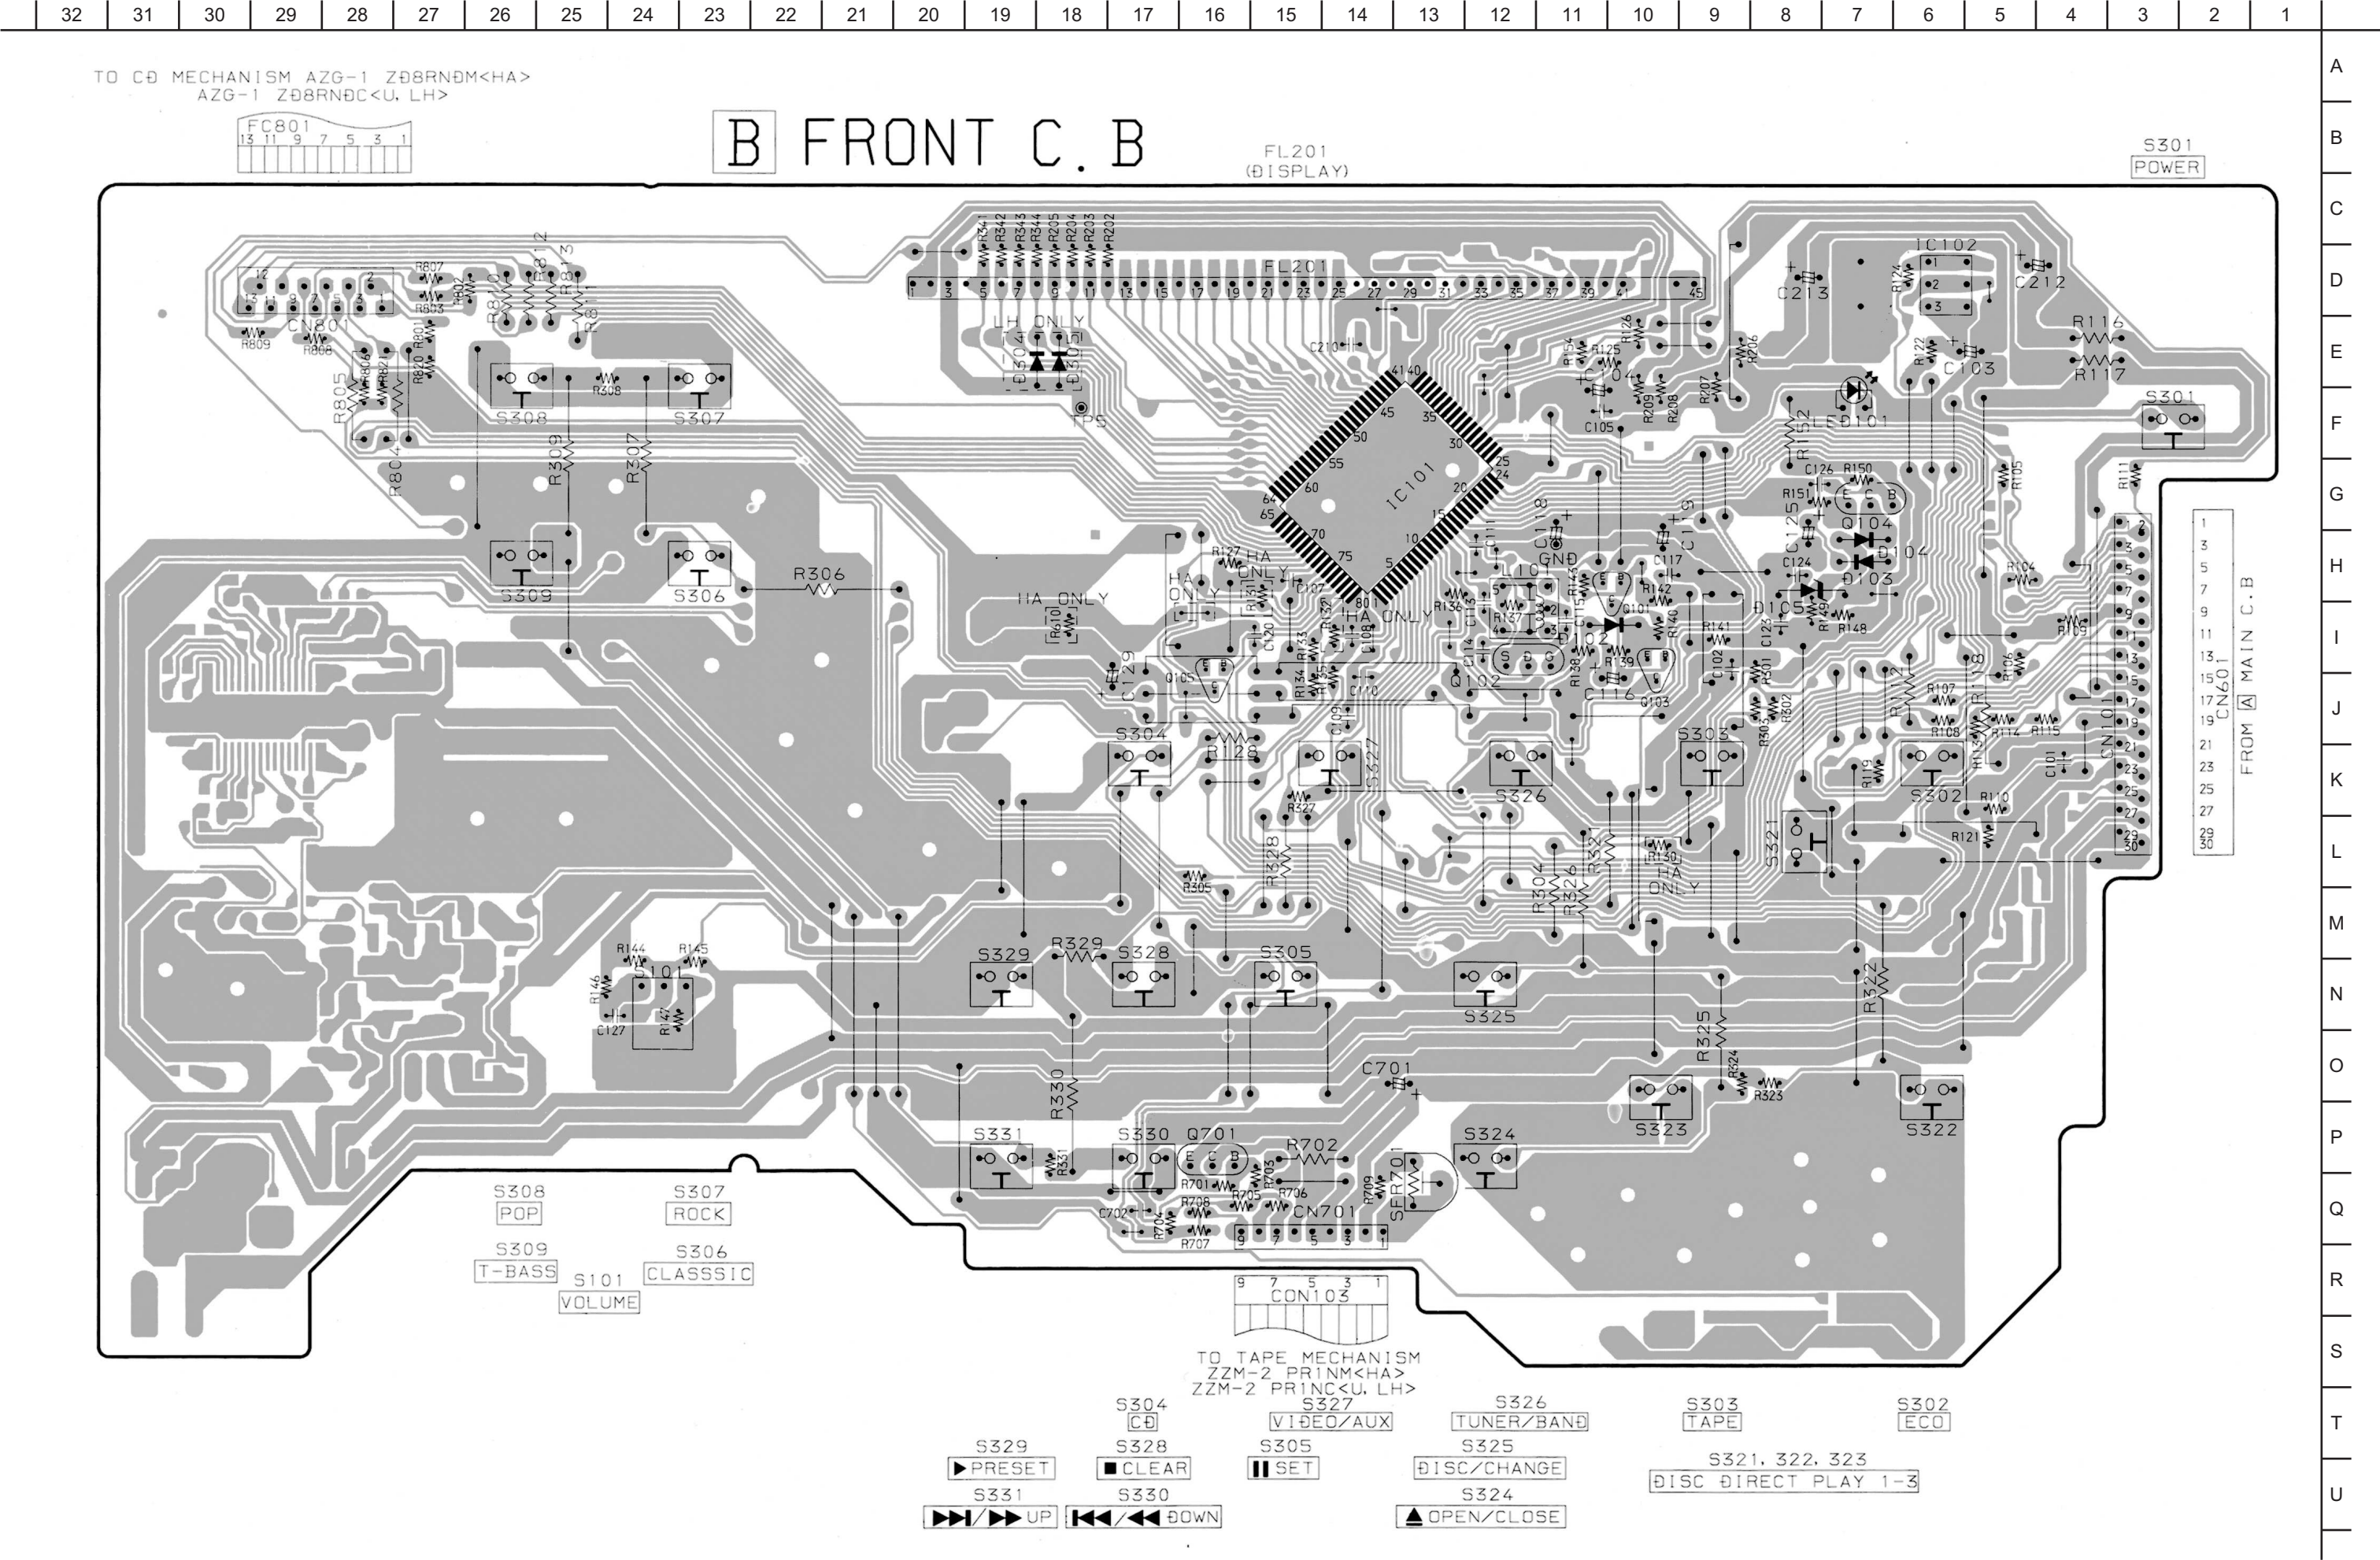





SCHEMATIC DIAGRAM - 5 (FRONT)

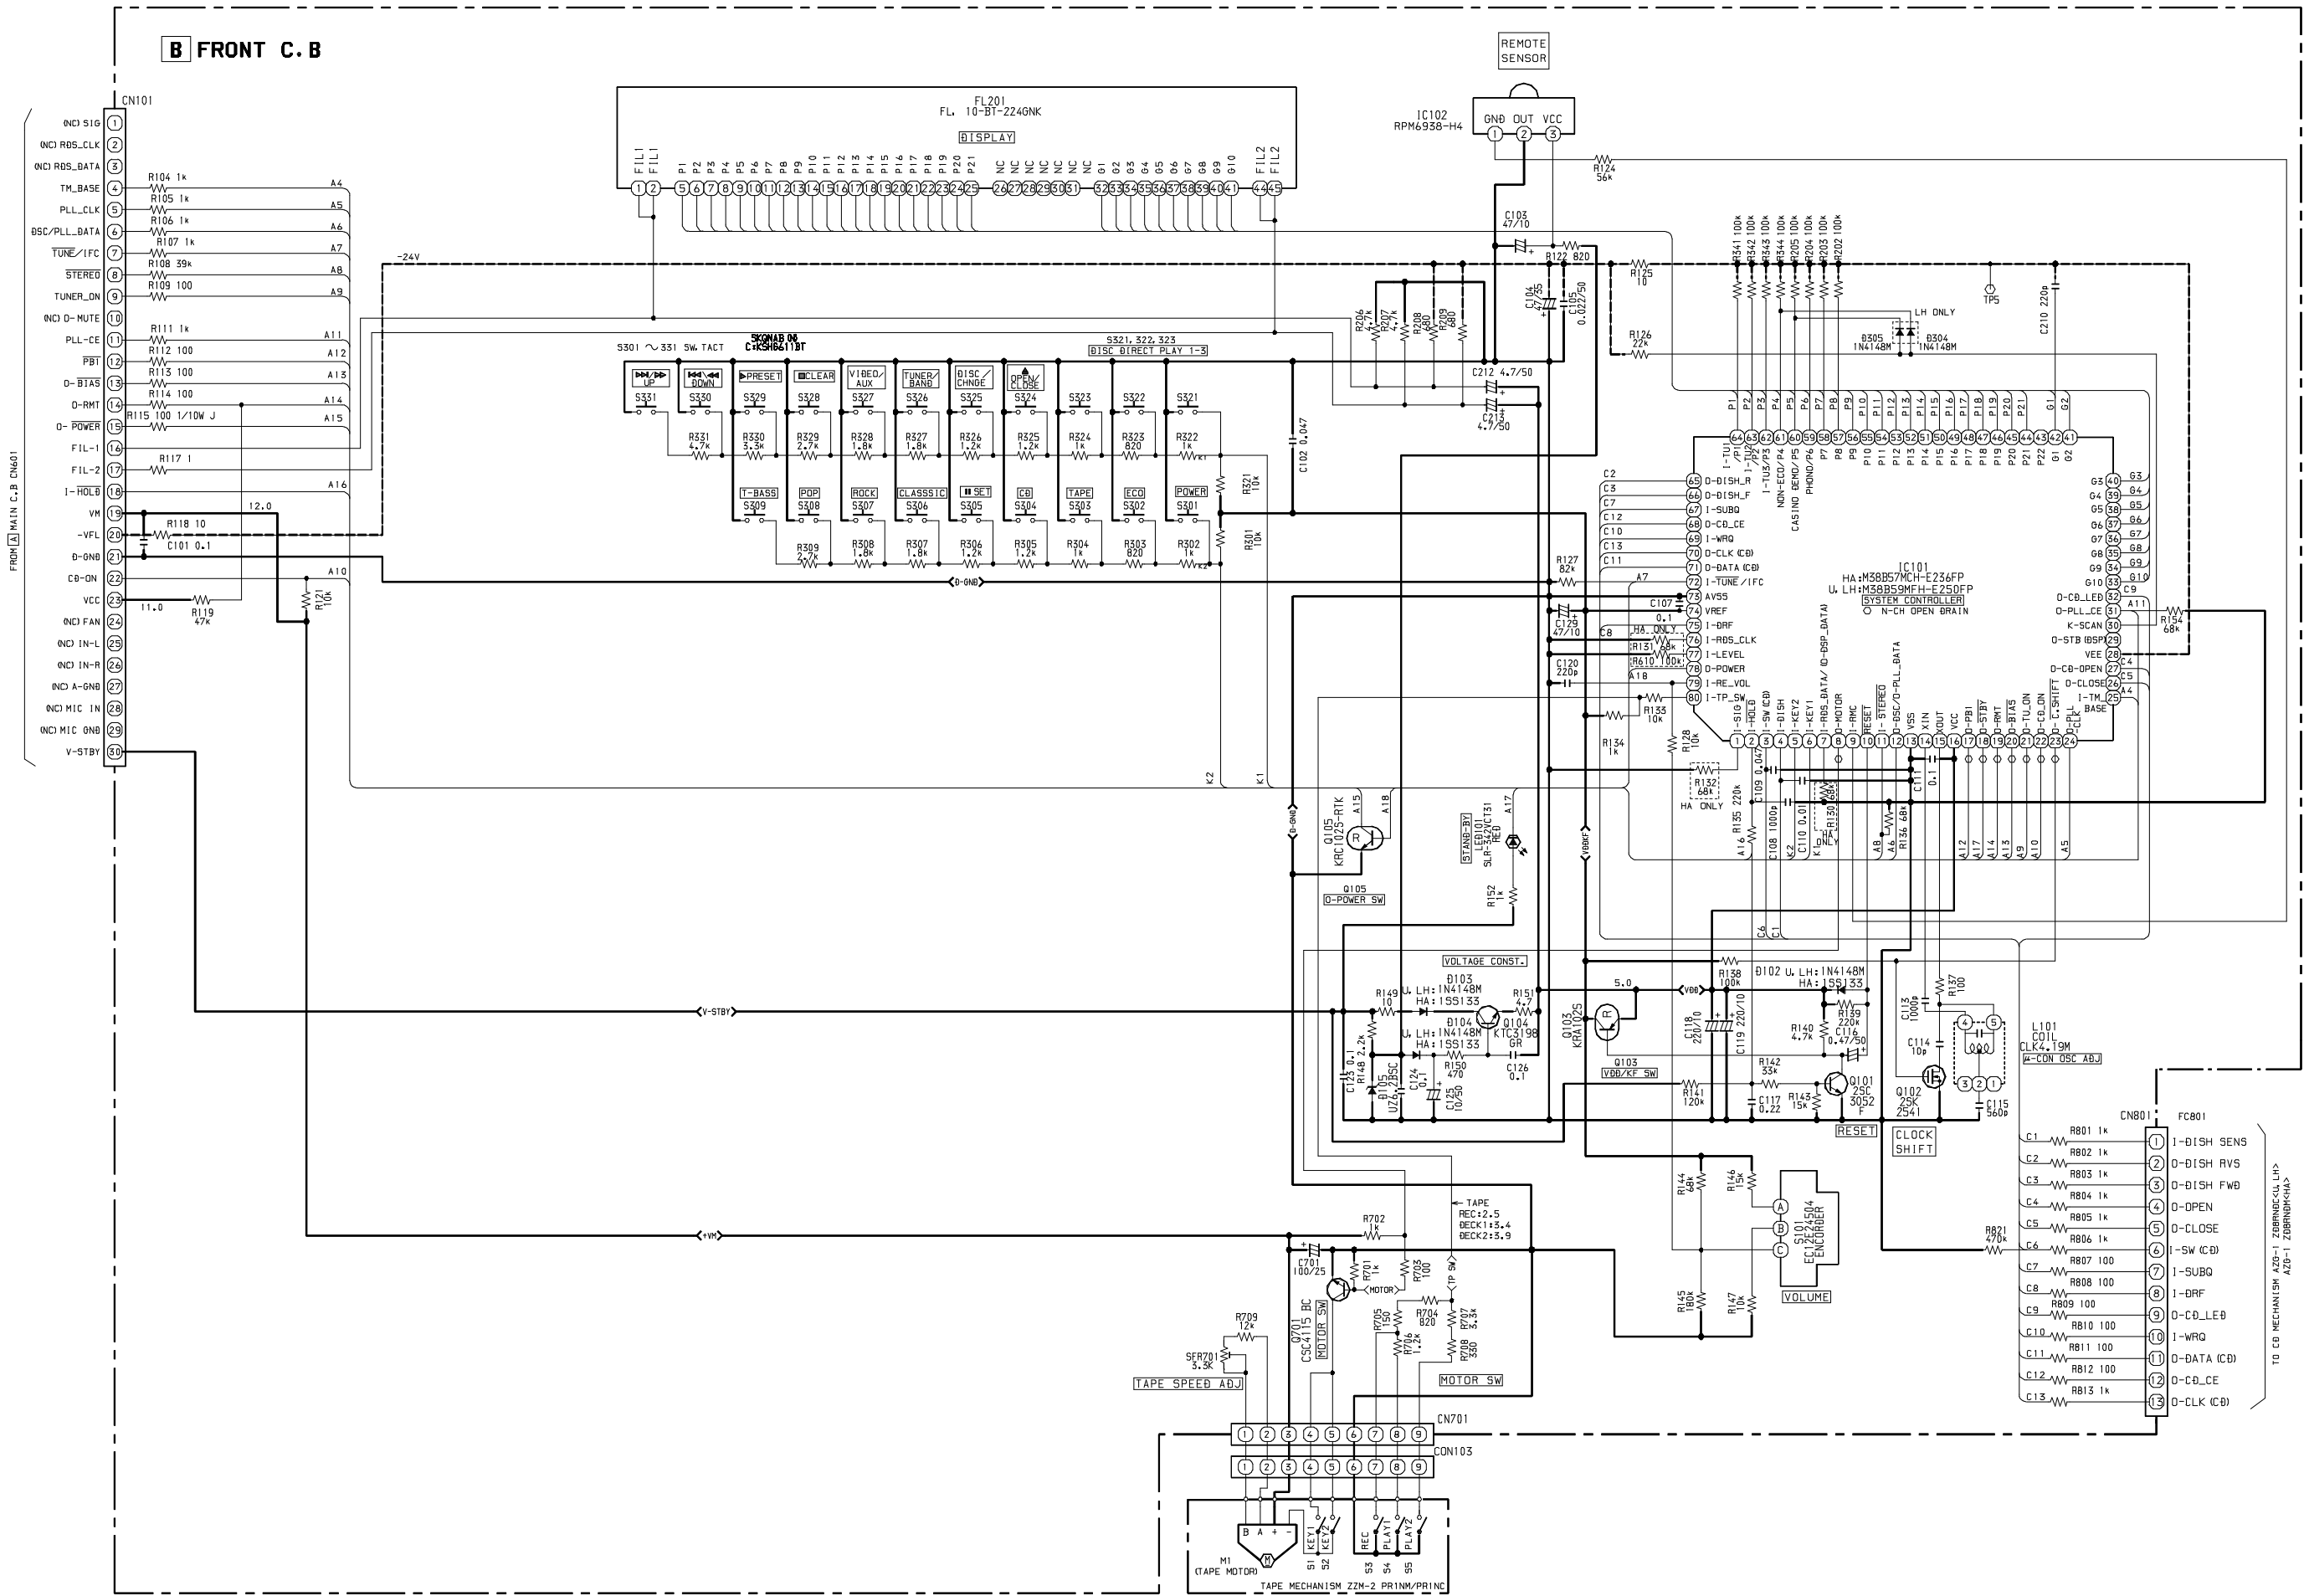


WIRING - 4 (PT) <U>

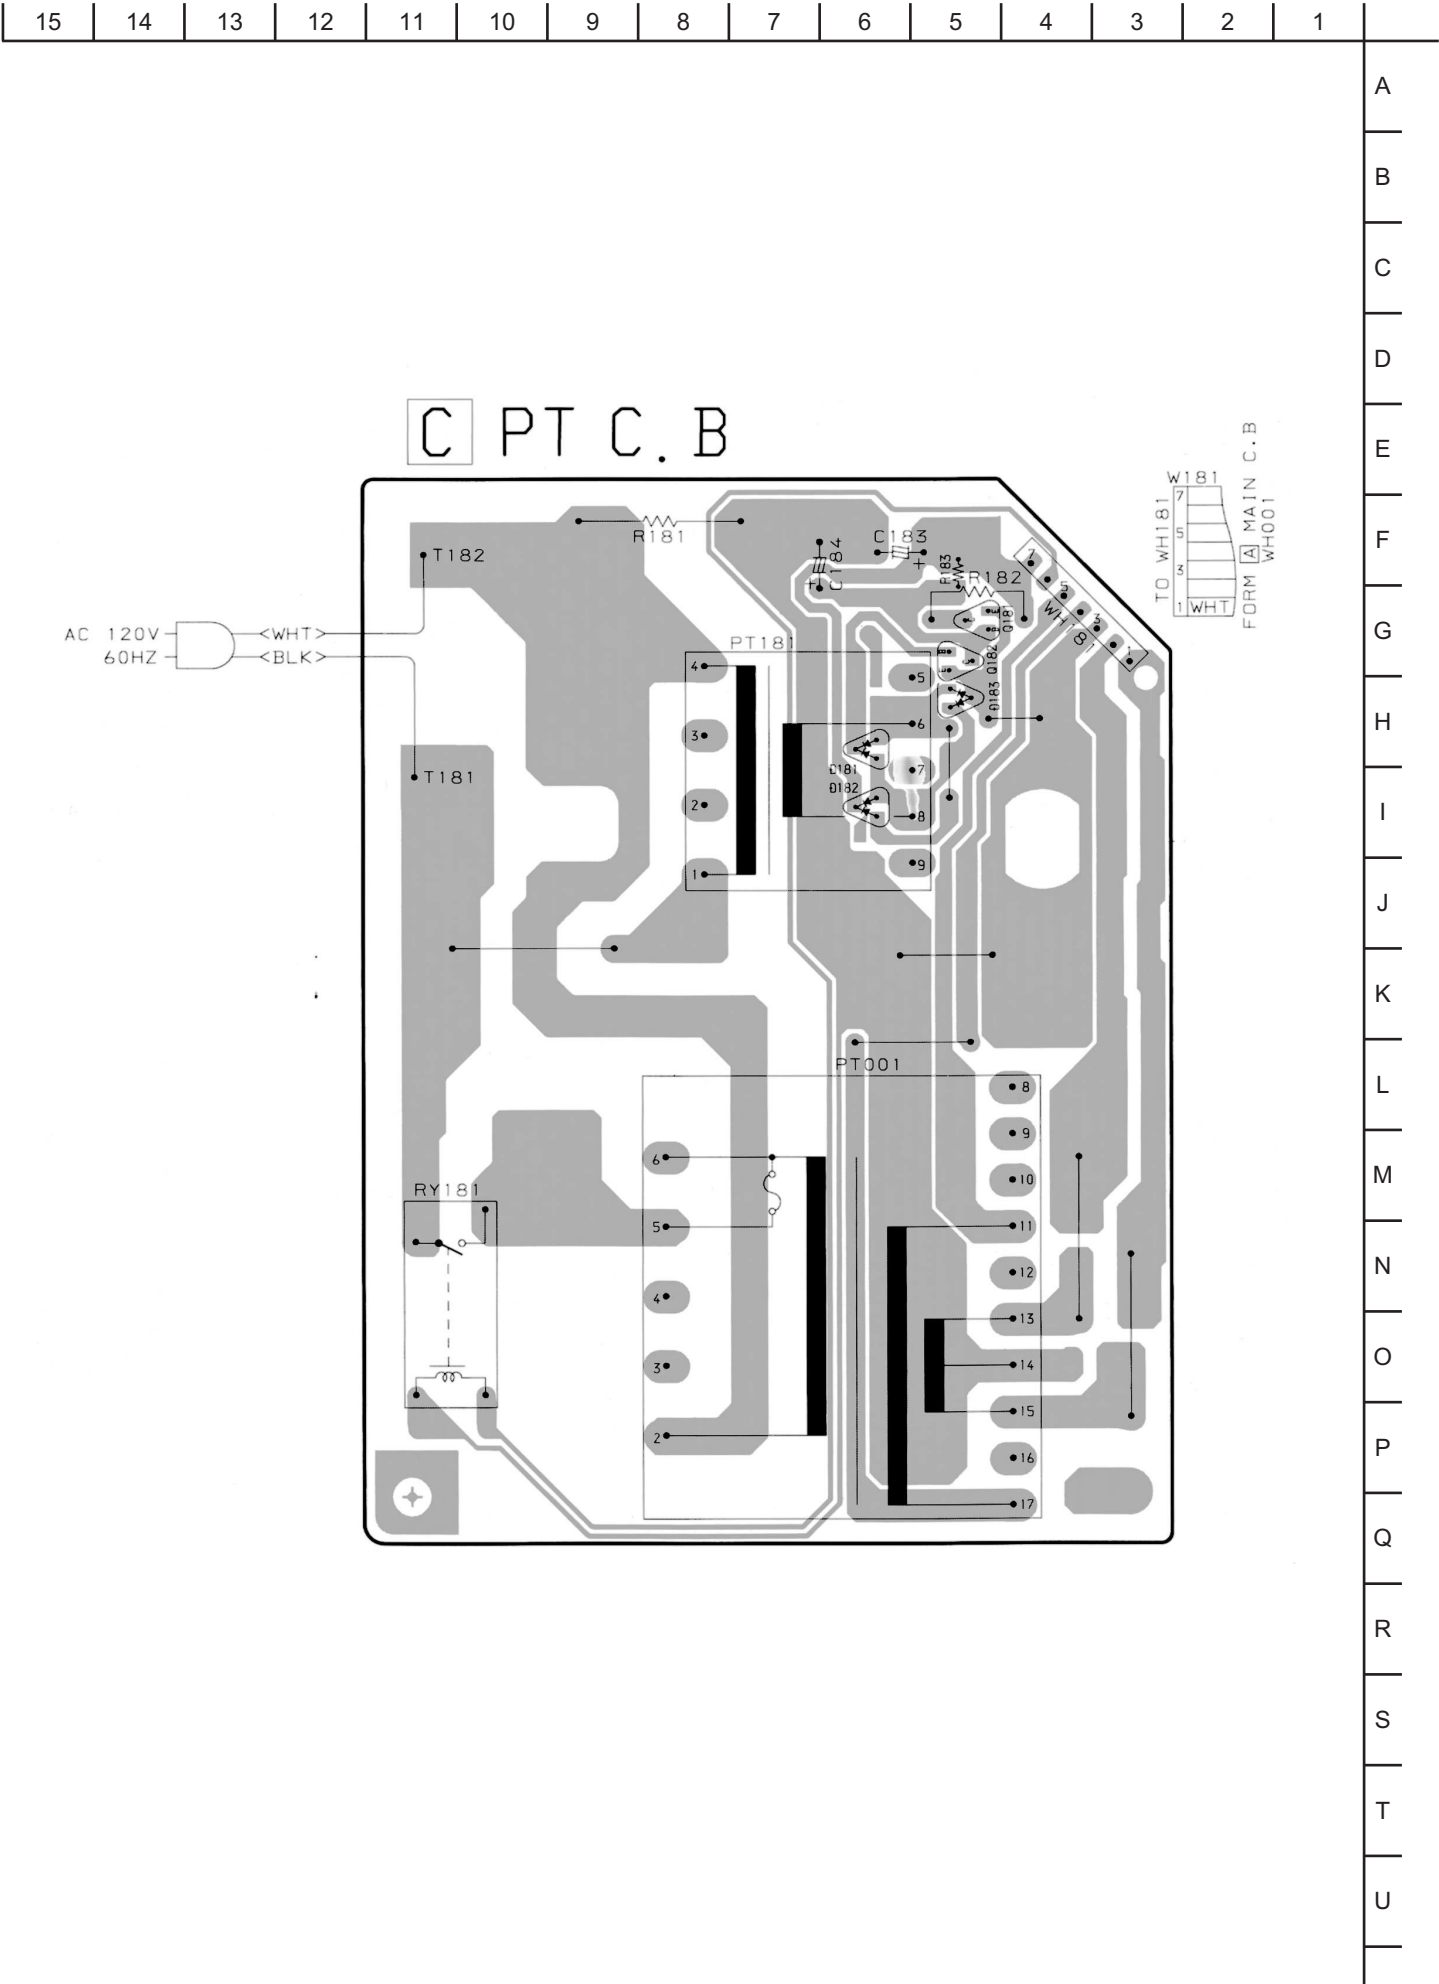


WIRING - 5 (PT) <HA,LH>

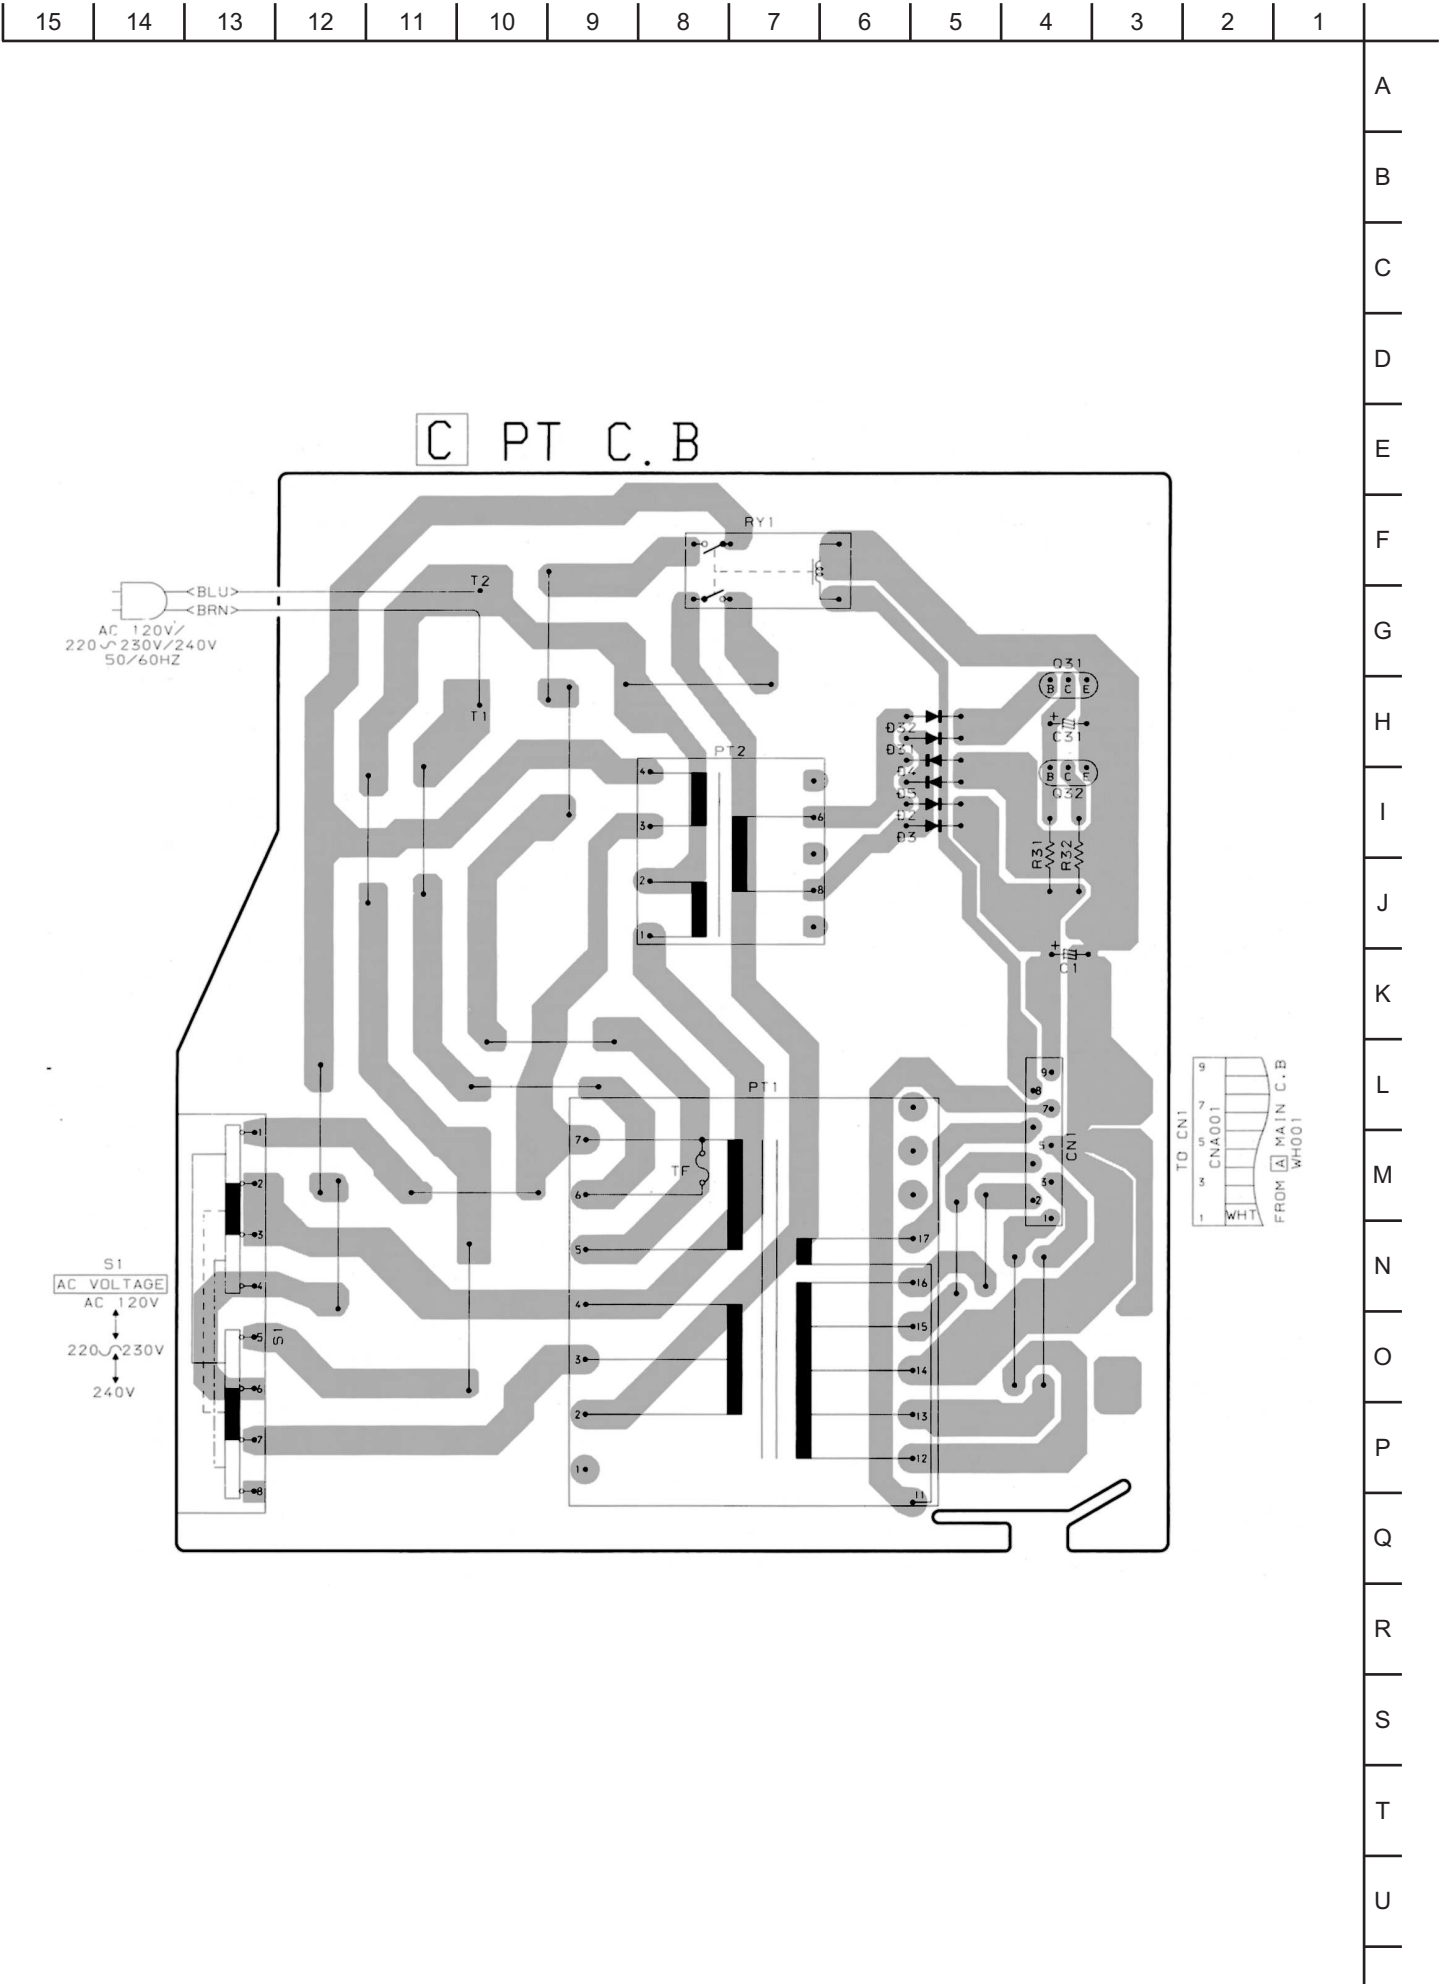


SCHEMATIC DIAGRAM - 6 (PT) <U>

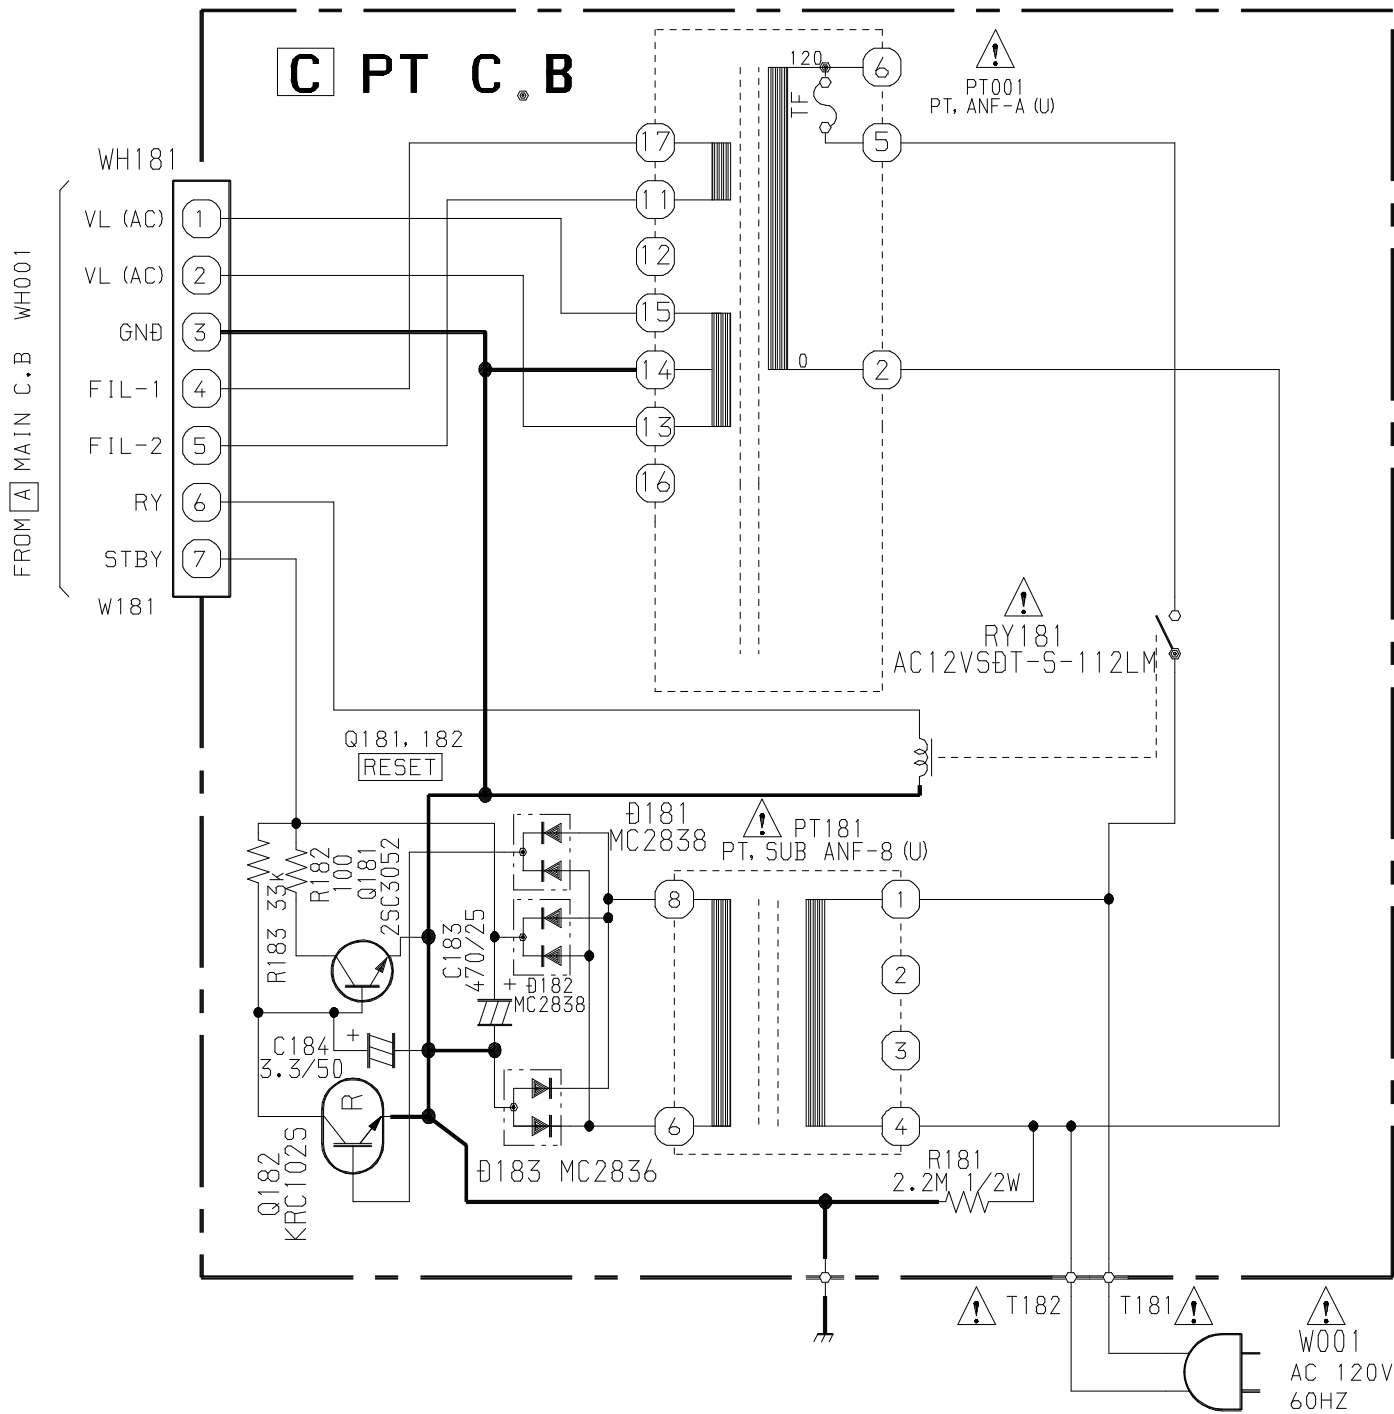


SCHEMATIC DIAGRAM - 7 (PT) <HA,LH>

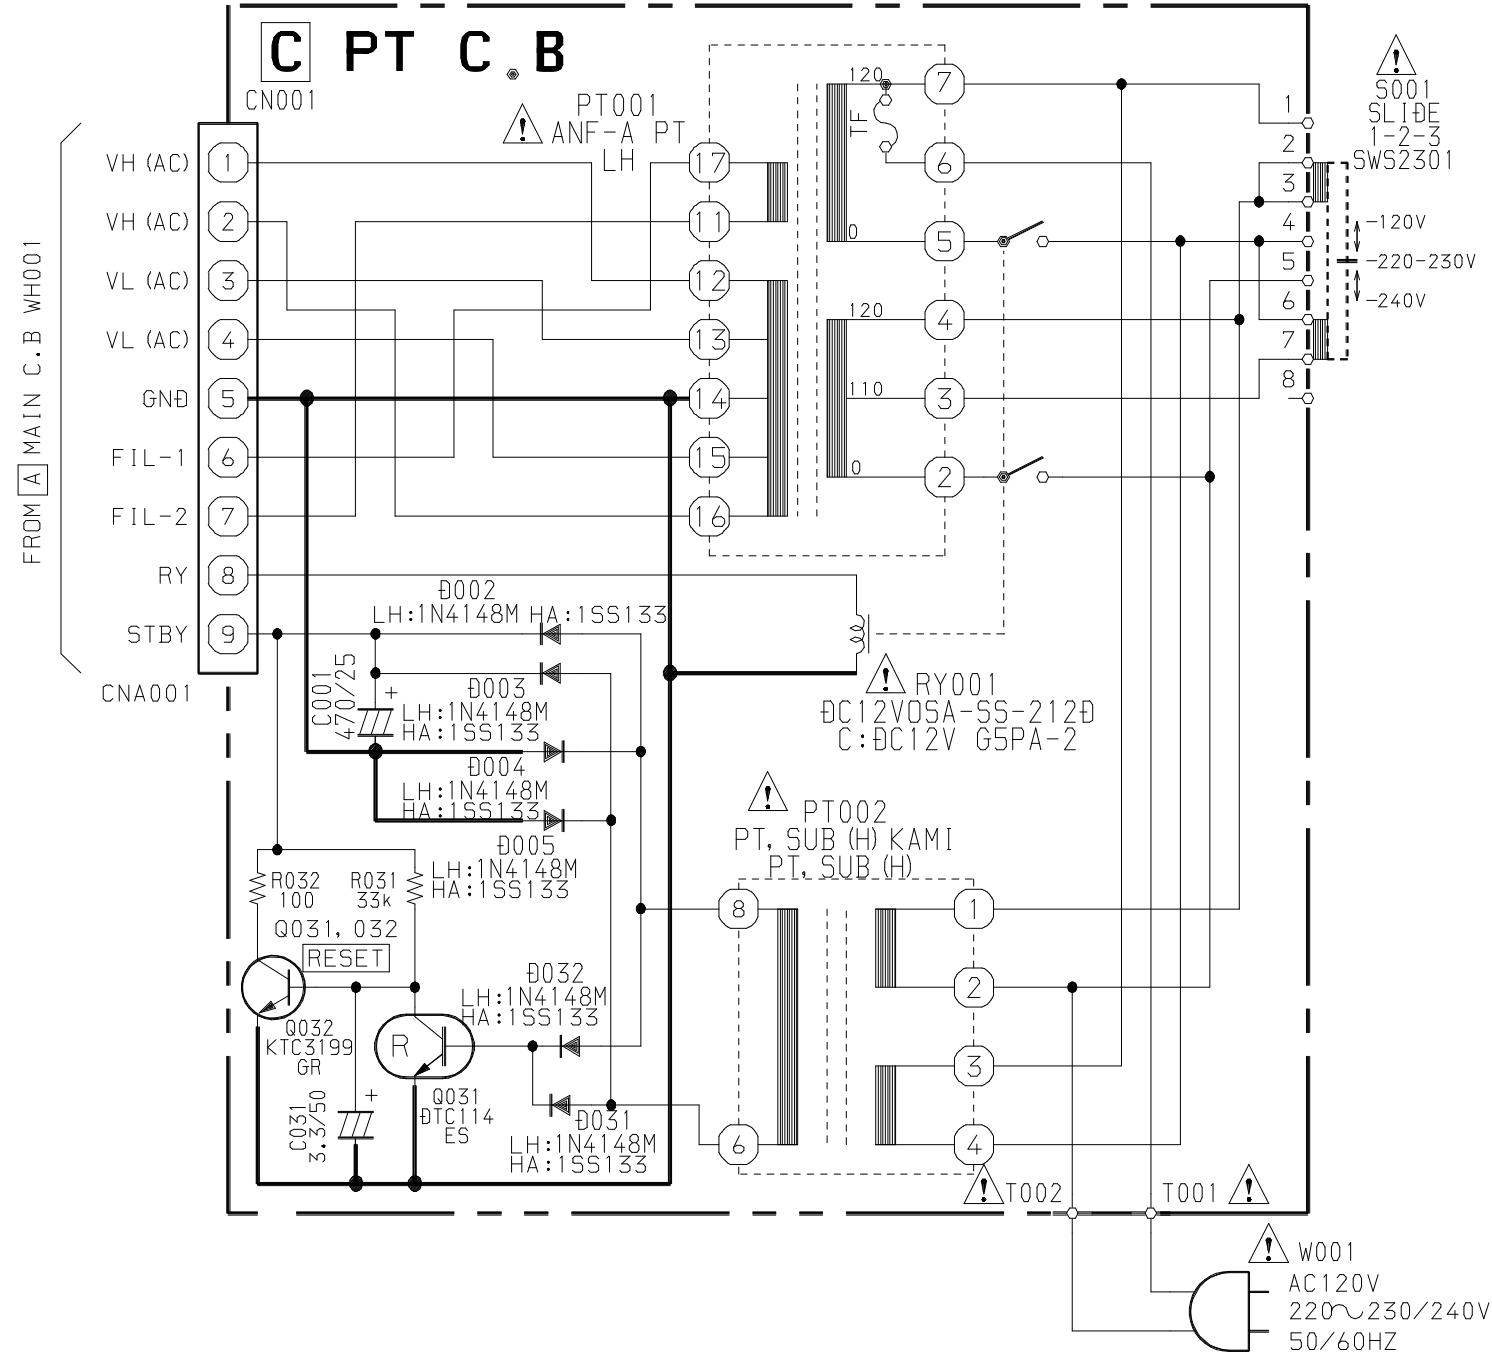


# WIRING - 6 (DECK)

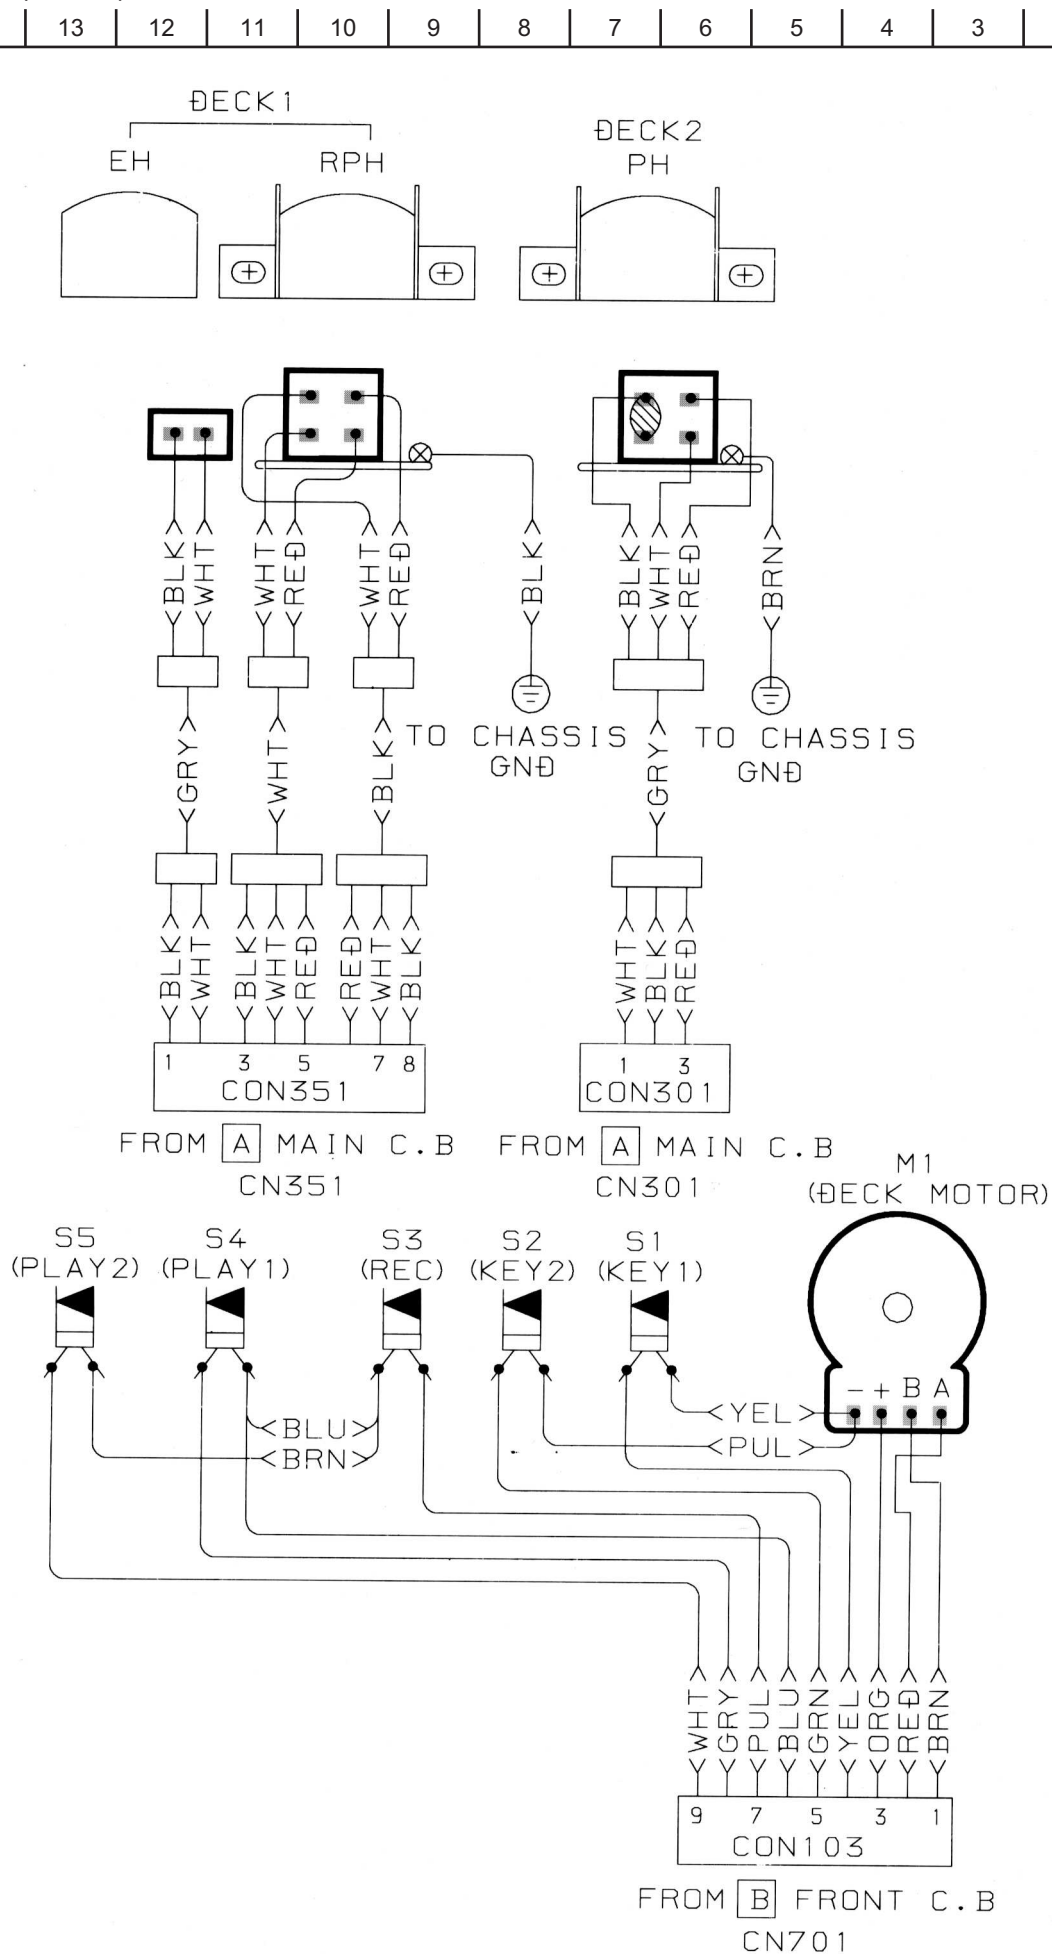


IC BLOCK DIAGRAM  
IC,LC72131D

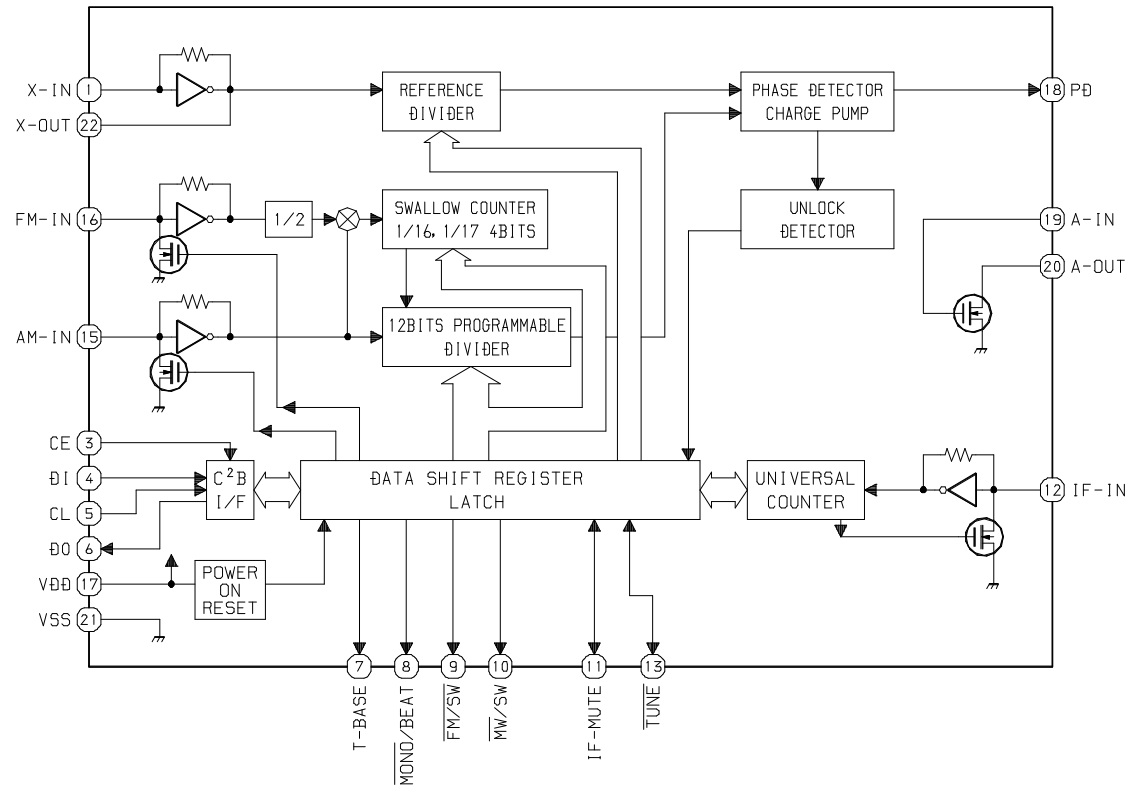


IC,M62495AFP

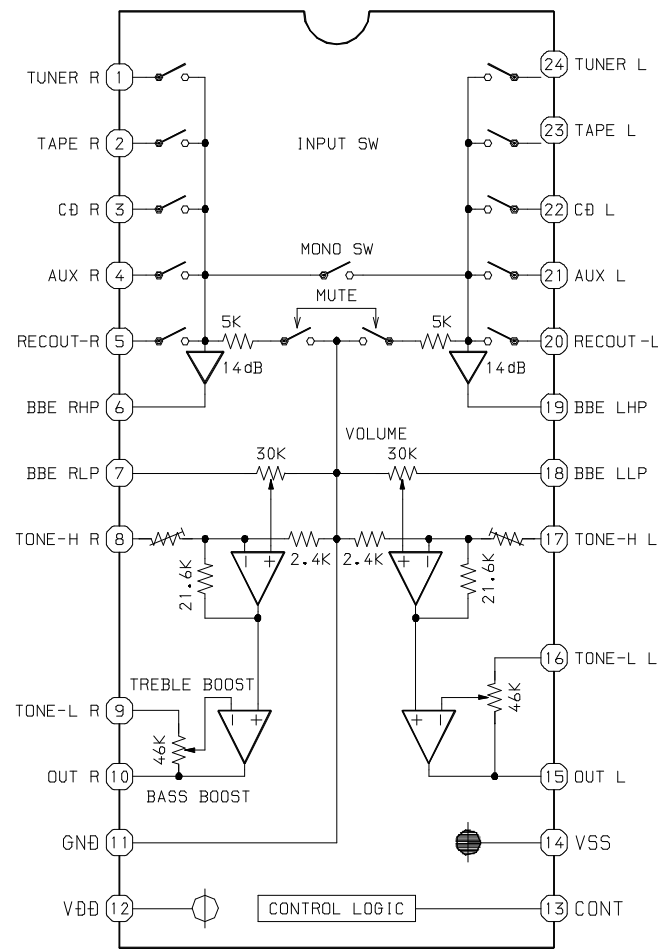

IC,LA1843

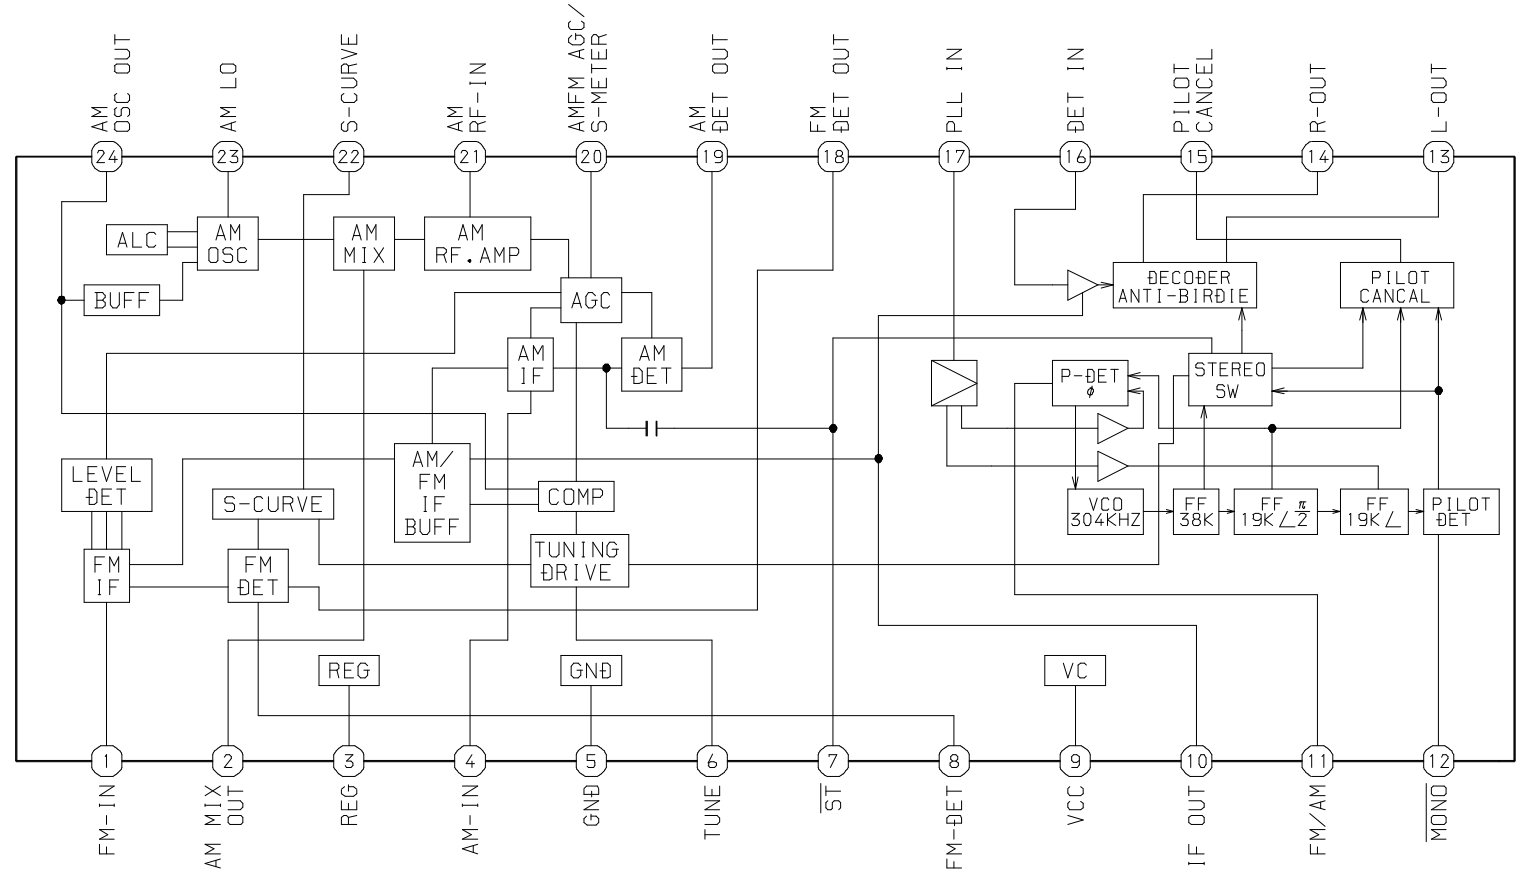

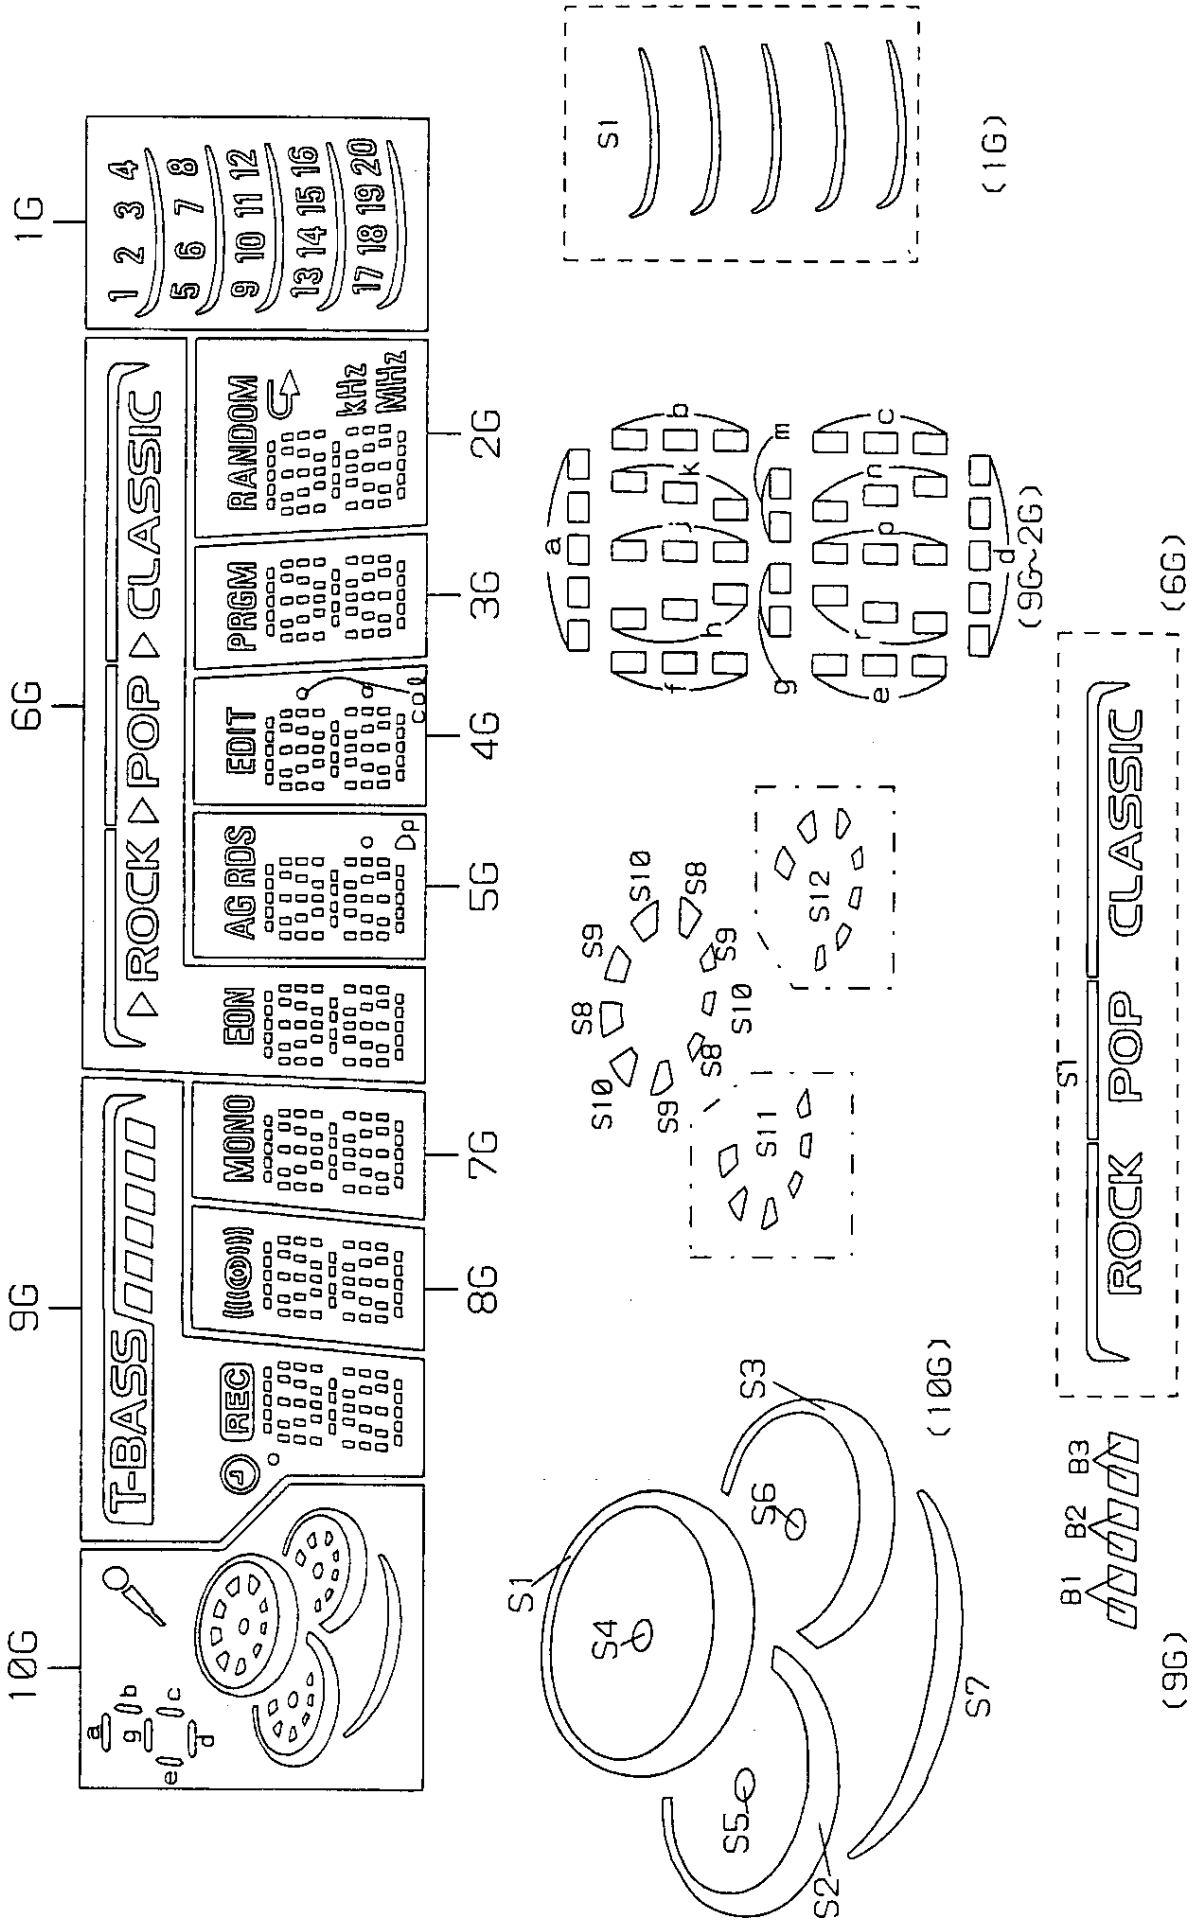

ANODE CONNECTION

	10G	9G	8G	7G	6G	5G	4G	3G	2G	1G
P1	-	d	d	d	d	d	d	d	d	16
P2	S7	n	n	n	n	n	n	n	n	20
P3	-	p	p	p	p	p	p	p	p	19
P4	S11	r	r	r	r	r	r	r	r	18
P5	S5	e	e	e	e	e	e	e	e	17
P6	S2	c	c	c	c	c	c	c	c	16
P7	S12	g	g	g	g	g	g	g	g	15
P8	S6	m	m	m	m	m	m	m	m	14
P9	S3	f	f	f	f	f	f	f	f	13
P10	S10	b	b	b	b	b	b	b	b	12
P11	S9	k	k	k	k	k	k	k	k	11
P12	S8	j	j	j	j	j	j	j	j	10
P13	S4	h	h	h	h	h	h	h	h	9
P14	S1	a	a	a	a	a	a	a	a	8
P15	-	Ⓢ	((( )))	MONO	EON	Dp	col (F)	-	MHZ	7
P16	-	(REC)	-	-	-	AG	col (L)	-	KHZ	6
P17	🔧	○	-	-	△ (CLASSIC)	RDS	EDIT	PRGM	↩	5
P18	a, d, g	TEASE	-	-	△ (ROCK)	-	-	-	-	4
P19	b	B1	-	-	△ (POP)	-	-	-	-	3
P20	c	B2	-	-	S1	-	-	-	RANDOM	2
P21	e	B3	-	-	-	-	-	-	-	1
										S1



## IC DESCRIPTION


IC, M38B57MCH-E236FP / M38B59MFH-E250FP

Pin No.	Pin Name	I/O	Description
1	I-SIG	I	RDS signal level A/D input. (Not used)
2	I-HOLD	I	Hold voltage level A/D input.
3	I-SW (CD)	I	CD mecha SW A/D input.
4	I-DISH	I	CD turn-table position check A/D input.
5	I-KEY2	I	KEY2 A/D input.
6	I-KEY1	I	KEY1 A/D input.
7	I-RDS-DATA/ (O-DSP_DATA)	I/O	RDS data input / DSP IC data (V-CD) output. (Not used)
8	O-MOTOR	O	Deck motor supply ON/OFF output.
9	I-RMC	I	System remote control signal input. ("L"=ACTIVE)
10	RESET	I	System reset input. ("L"=RESET)
11	I-STEREO	I	Tuner stereo input. ("L"=STEREO)
12	O-DSC/O-PLL_DATA	O	Function IC control & PLL data output.
13	VSS	-	GND.
14,15	XIN, XOUT	I/O	4.19MHz system CLK input / output.
16	VCC	-	Power supply input.
17	O-PB1	O	Deck 1/2 switch output. ("L"=PLAYBACK DECK 1)
18	O-STBY	O	Standby LED ON/OFF output. ("L"=ON)
19	O-RMT	O	REC mute output. ("H"=MUTE)
20	O-BIAS	O	Record bias ON/OFF output. ("L"=ON)
21	O-TU_ON	O	Tuner supply ON/OFF output. ("H"=ON)
22	O-CD_ON	O	CD supply ON/OFF output. ("H"= ON)
23	O-C.SHIFT	O	MICON clock shift output. ("L"=SHIFT)
24	O-PLL-CLK	O	PLL IC CLK output.
25	I-TM_BASE	I	8 Hz time base input.
26	O-CLOSE	O	CD door close output.
27	O-CD-OPEN	O	CD door open output.
28	VEE	-	Power supply input for FL display.
29	O-STB(DSP)	O	DSP IC strobe output. (Not used)
30	K-SCAN	O	Initial key scan output.
31	O-PLL_CE	O	CD PLL IC chip enable output.
32	O-CD_LED	O	CD flash window LED output.
33~42	G10~G1	O	FL grid output (G10~G1).
43	P22	O	FL segment output (P22). (Not used)
44~58	P21~P7	O	FL segment output (P21~P7).
59	PHONO/P6	I/O	PHONO diode input / FL segment output (P6).
60	CASINO DEMO/P5	I/O	CASINO DEMO diode input (Not used) / FL segment output (P5).
61	NON-ECO/P4	I/O	ECO OFF diode input / FL segment output (P4).
62	I-TU3/P3	I/O	TU 3 diode input (Not used) / FL segment output (P3).
63	I-TU2/P2	I/O	TU 2 diode input (Not used) / FL segment output (P2).
64	I-TU1/P1	I/O	TU 1 diode input (Not used) / FL segment output (P1).


Pin No.	Pin Name	I/O	Description
65	O-DISH_R	O	CD turn-table reverse turn output.
66	O-DISH_F	O	CD turn-table forward turn output.
67	I-SUBQ	I	Sub code-Q data input.
68	O-CD_CE	O	CD DSP chip enable output.
69	I-WRQ	I	CD WRQ input.
70	O-CLK (CD)	O	CD control clock output .
71	O-DATA (CD)	O	CD control data output.
72	I-TUNE/IFC	I	Tuner SD input / IF count input.
73	AVSS	-	GND.
74	VREF	-	Reference voltage.
75	I-DRF	I	CD DRF input.
76	I-RDS_CLK	I	RDS clock input. (Not used)
77	I-LEVEL	I	Connected to GND through a resistor.
78	O-POWER	O	SYSTEM Power ON/OFF output. ("H"=ON)
79	I-RE_VOL	I	Rotary encoder A/D input.
80	I-TP_SW	I	Deck mecha SW A/D input.

# ADJUSTMENT <TUNER / DECK>


## A MAIN C.B

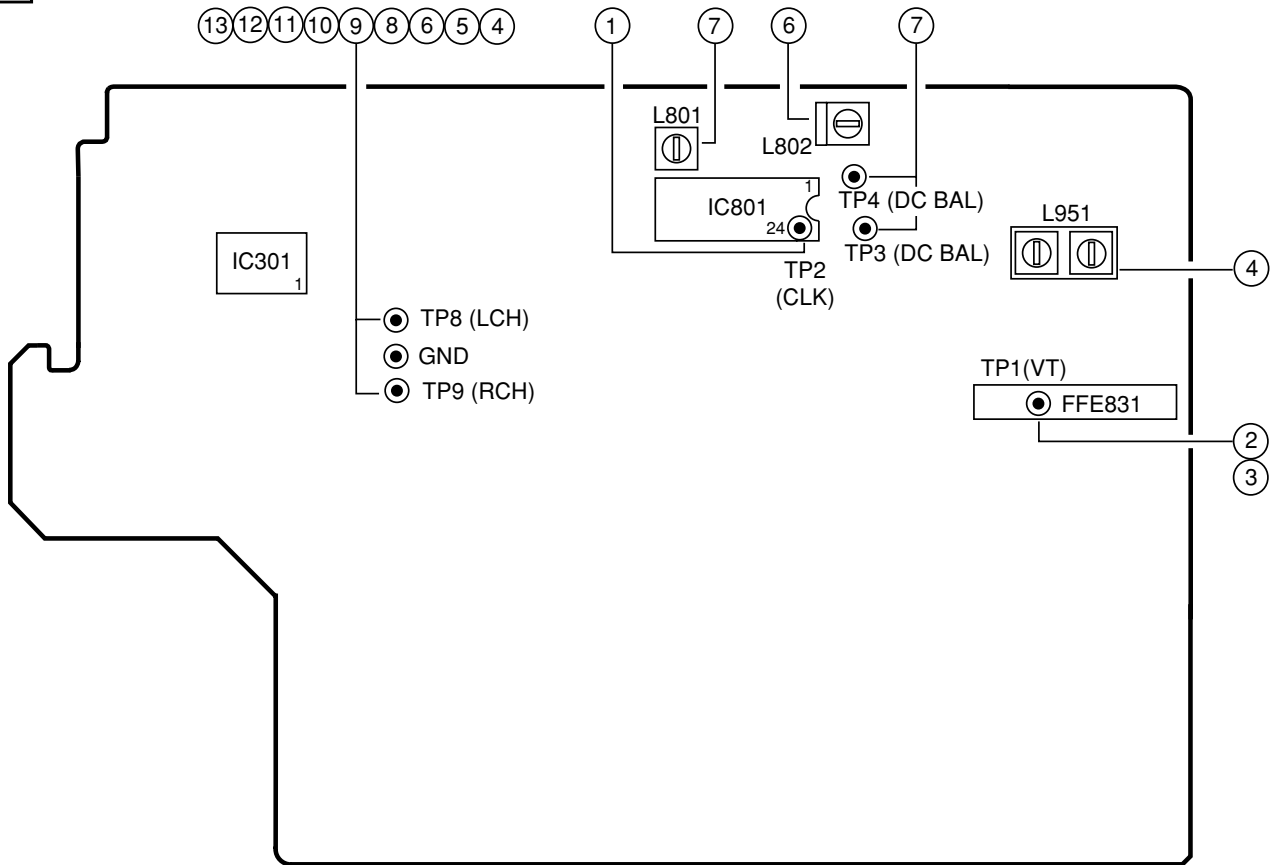

## DECK-1 R/P/E, DECK-2 P HEAD

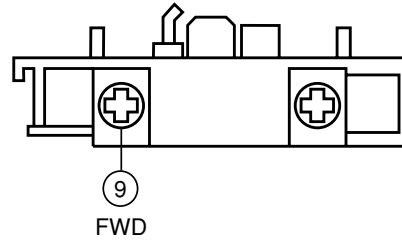

## B FRONT C.B

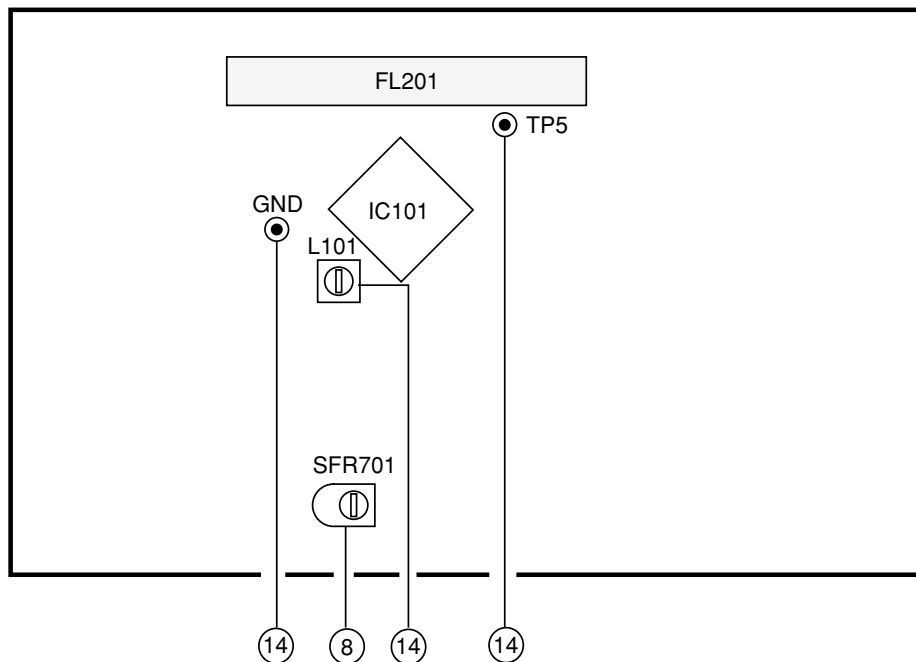

## < TUNER SECTION >


1. Clock frequency Check  
Settings : • Test point : TP2 (CLK)  
Method : Set to AM 1710kHz and check that the test point is 2160kHz  $\pm$  45Hz.
2. AM VT Check  
Settings : • Test point : TP1 (VT)  
Method : Set to AM 1710kHz, 530kHz and check that the test point is less than 8.5V (1710kHz) and more than 0.6V (530kHz).
3. FM VT Check  
Settings : • Test point : TP1 (VT)  
Method : Set to FM 87.5MHz, 108.0MHz and check that the test point is more than 0.5V (87.5MHz) and less than 8.0V (108.0MHz).
4. AM Tracking Adjustment  
Settings : • Test point : TP8(Lch), TP9(Rch)  
• Adjustment location :  
L951 (1/3) ..... 1000kHz  
Method : Set to AM 1000kHz and adjust L951 (1/3) to MAX.
5. FM Tracking Check  
Settings : • Test point : TP8(Lch), TP9(Rch)  
Method : Set to FM 98.0MHz and check that the test point is less than 9dB $\mu$ V.
6. AM IF Adjustment  
Settings : • Test point : TP8(Lch), TP9(Rch)  
• Adjustment location :  
L802 ..... 450kHz
7. DC Balance / Mono Distortion Adjustment  
Settings : • Test point : TP3, TP4 (DC Balance)  
• Adjustment location : L801  
• Input level : 60dB $\mu$ V  
Method : Set to FM 98.0MHz and adjust minimum distortion by L801 and check that the voltage between TP3 and TP4 becomes 0  $\pm$  300 mV.

## < DECK SECTION >

8. Tape Speed Adjustment (DECK 1)  
Settings : • Test tape : TTA-100  
• Test point : TP8(Lch), TP9(Rch)  
• Adjustment location : SFR701  
Method : Play back the test tape and adjust SFR701 so that the frequency counter reads 3000Hz  $\pm$  5Hz.
9. Head Azimuth Adjustment (DECK 1, DECK 2)  
Settings : • Test tape : TTA-330  
• Test point : TP8(Lch), TP9(Rch)  
• Adjustment location : Head azimuth adjustment screw  
Method : Play back (FWD) the 8kHz signal of the test tape and adjust screw so that the output becomes maximum. Next, perform on REV PLAY mode.
10. PB Frequency Response Check (DECK 1, DECK 2)  
Settings : • Test tape : TTA-330  
• Test point : TP8(Lch), TP9(Rch)  
Method : Play back the 315Hz and 8kHz signals of the test tape and check that the output ratio of the 8kHz signal with respect to that of the 315Hz signal is within 4dB.
11. PB Sensitivity Check (DECK 1, DECK 2)  
Settings : • Test tape : TTA-200  
• Test point : TP8(Lch), TP9(Rch)  
Method : Play back the test tape and check that the output level of the test point is 110mV  $\pm$  3.5dB.
12. REC/PB Frequency Response Check (DECK 1)  
Settings : • Test tape : TTA-602  
• Test point : TP8(Lch), TP9(Rch)  
• Input signal : 1kHz / 8kHz (LINE IN)  
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at the test points becomes -20VU. Record and play back the 1kHz and 8kHz signals and check that the output of the 8kHz signals is 0dB  $\pm$  5dB with respect to that of the 1kHz signal.
13. REC/PB Sensitivity Check (DECK 1)  
Settings : • Test tape : TTA-602  
• Test point : TP8(Lch), TP9(Rch)  
• Input signal : 1kHz (LINE IN)  
Method : Apply a 1kHz signal and REC mode. Then adjust OSC attenuator so that the output level at TP8, TP9 becomes 0VU. Record and play back the 1kHz signals and check that the output is -2dB  $\pm$  3.5dB.

## < FRONT SECTION >

14. u-CON OSC Adjustment  
Settings : • Test point : TP5  
• Adjustment location : L101  
Method : Insert AC plug with pressing of TUNER function key and POWER key. Adjust L101 so that the frequency across the test point is 58.350Hz  $\pm$  0.02Hz.

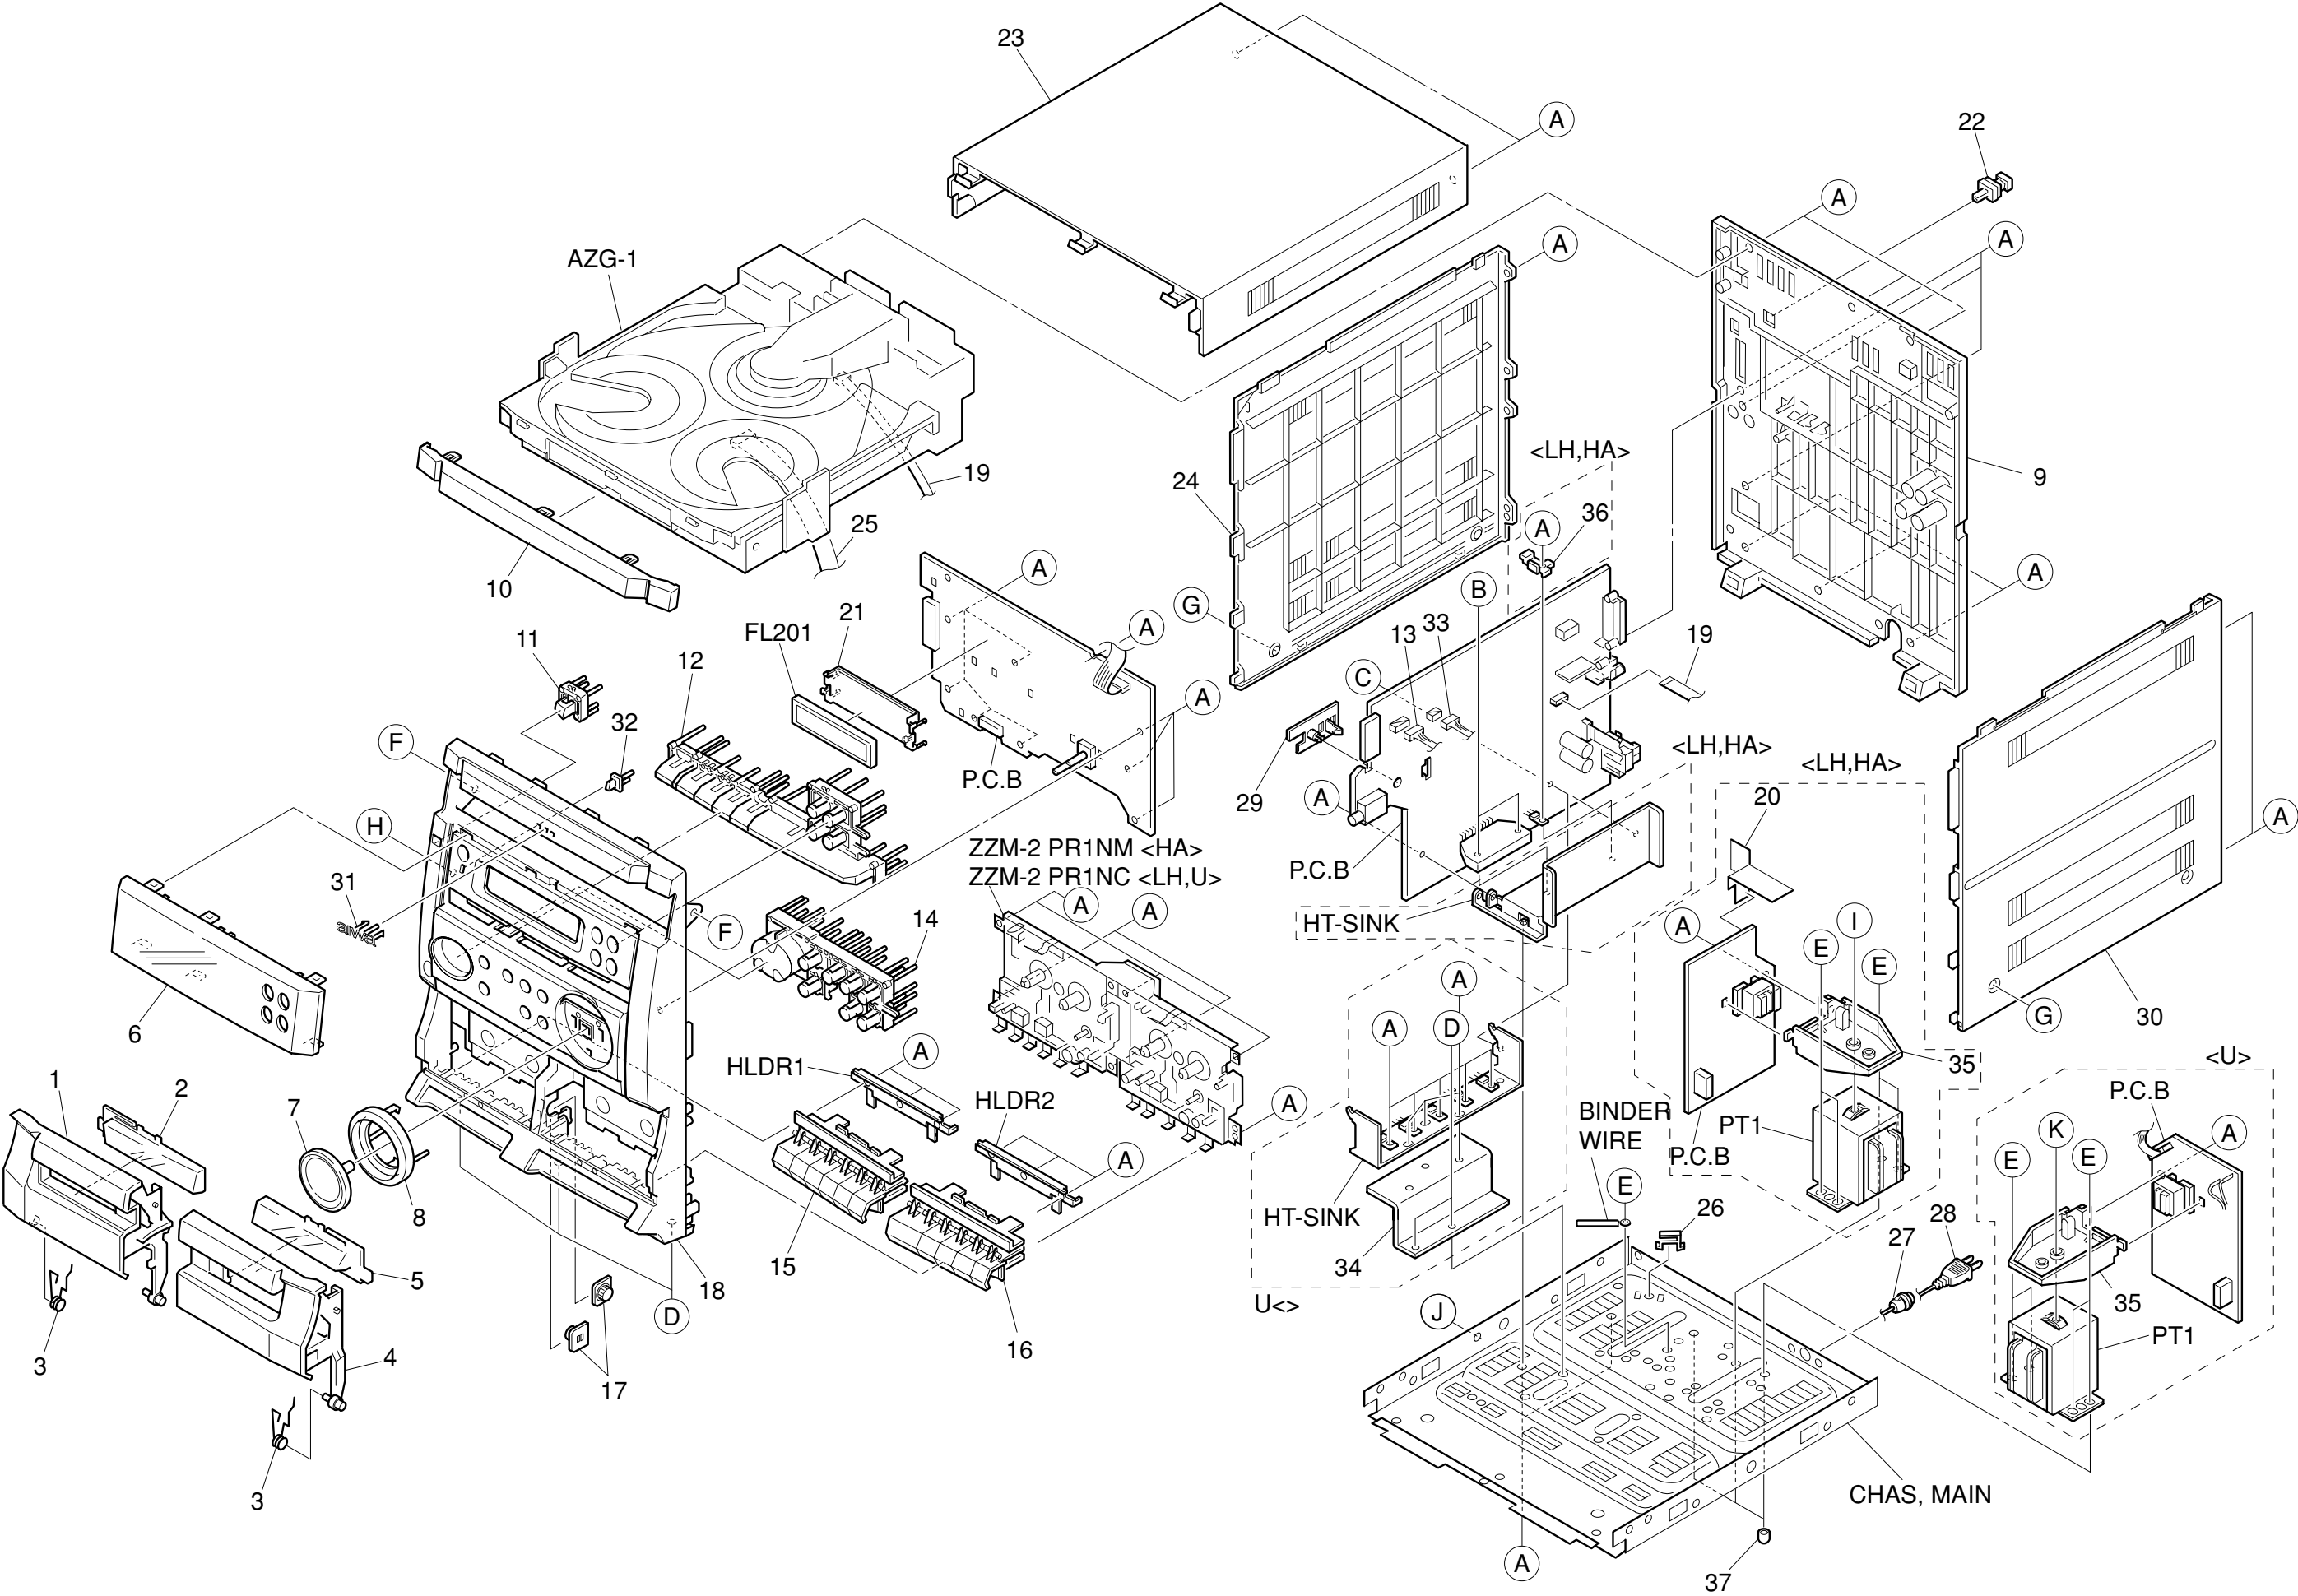


# MECHANICAL PARTS LIST 1 / 1

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NFA-003-010		BOX, CASS 1	27	87-A91-422-010		BUSHING, AC CORD (U) <U>
2	8A-NFA-006-010		WINDOW, CASS 1	△ 28	87-A80-105-010		AC CORD ASSY, AZ<HA>
3	82-NF7-218-010		SPR-T, CASS	△ 28	87-A80-092-010		AC CORD ASSY, E BLK SUN FAI<LH>
4	8A-NFA-004-010		BOX, CASS 2	△ 28	87-A80-110-010		AC CORD ASSY, U SPT-2W<U>
5	8A-NFA-007-010		WINDOW, CASS 2	29	8A-NFA-214-010		HLDR, PWB M ANFA<HA, LH>
6	8A-NFA-051-010		WINDOW, DISP H<HA, LH>	30	8A-NFA-065-010		PANEL, RIGHT V-2
6	8A-NFA-005-010		WINDOW, DISP U<U>	31	87-B00-002-010		BADGE, AIWA 30 ABS SIL<U, LH>
7	8A-NFA-011-010		KNOB, RTRY VOL	31	87-CE3-023-010		BADGE, AIWA 30N SILV<HA>
8	8A-NFA-012-010		RING, VOL	32	8A-NFA-018-010		REFLECTOR, ECO
9	8A-NFA-030-010		CABI, REAR LH W/O SPEC<HA>	33	8A-NFA-633-010		CONN ASSY, 3P (PH)
9	8A-NFA-032-010		CABI, REAR LHSC<LH>	34	8A-NFB-204-010		HLDR, HT-SINK S STEEL<U>
9	8A-NFA-031-010		CABI, REAR USC<U>	35	8A-NF9-208-010		HLDR, PWB PT<U, LH>
10	8A-NFA-002-010		PANEL, TRAY H	35	8A-NF9-211-010		HLDR, PWB PT HI<HA>
11	8A-NFA-008-010		KEY, POWER	36	8A-NF8-205-010		HLDR, IC<HA, LH>
12	8A-NFA-009-010		KEY, FUN	37	8Z-NB8-240-010		COVER, PL
13	8A-NFA-634-010		CONN ASSY, 8P RPB	A	87-067-703-010		TAPPING SCREW, BVT2+3-10
14	8A-NFA-010-010		KEY, OPE	B	87-067-581-010		TAPPING SCREW, BVT2+3-15
15	8A-NFA-013-010		KEY, CASS 1	C	87-NF4-224-010		S-SCREW, IT3B+3-8 CU
16	8A-NFA-014-010		KEY, CASS 2P	D	87-067-688-010		BVTT+3-6
17	86-NFZ-231-010		DMPR, 70	E	87-078-191-010		S-SCREW, IT+4-10
18	8A-NFA-001-010		CABI, FR U	F	87-721-097-410		QT2+3-12 GLD
19	88-906-251-110		FF-CABLE, 6P 1.25	G	87-067-641-010		UTT2+3-8 (W/O SLOT) BL
20	8A-NFA-212-010		PL, PL LH<LH, HA>	H	87-723-096-410		QT2+3-10W/O SLOT BL<HA, LH>
21	8A-NFA-208-010		GUIDE, FL 100-25 ANFA	I	87-067-579-010		TAPPING SCREW, BVT2+3-8
22	84-ZG1-245-210		CAP, OPTICAL	J	87-721-096-410		QT2+3-10 W/O SLOT
23	8A-NFA-062-010		PANEL, TOP V-2				
24	8A-NFA-063-010		PANEL, LEFT V-2				
25	88-913-221-110		FF-CABLE, 13P 1.25 220MM				
26	87-NF4-221-010		HLDR, CABLE				
27	87-085-185-010		BUSHING, AC CORD (E) <HA, LH>				

## COLOR NAME TABLE

Basic color symbol	Color	Basic color symbol	Color	Basic color symbol	Color
B	Black	C	Cream	D	Orange
G	Green	H	Gray	L	Blue
LT	Transparent Blue	N	Gold	P	Pink
R	Red	S	Silver	ST	Titan Silver
T	Brown	V	Violet	W	White
WT	Transparent White	Y	Yellow	YT	Transparent Yellow
LM	Metallic Blue	LL	Light Blue	GT	Transparent Green
LD	Dark Blue	DT	Transparent Orange	GM	Metallic Green
YM	Metallic Yellow	DM	Metallic Orange		

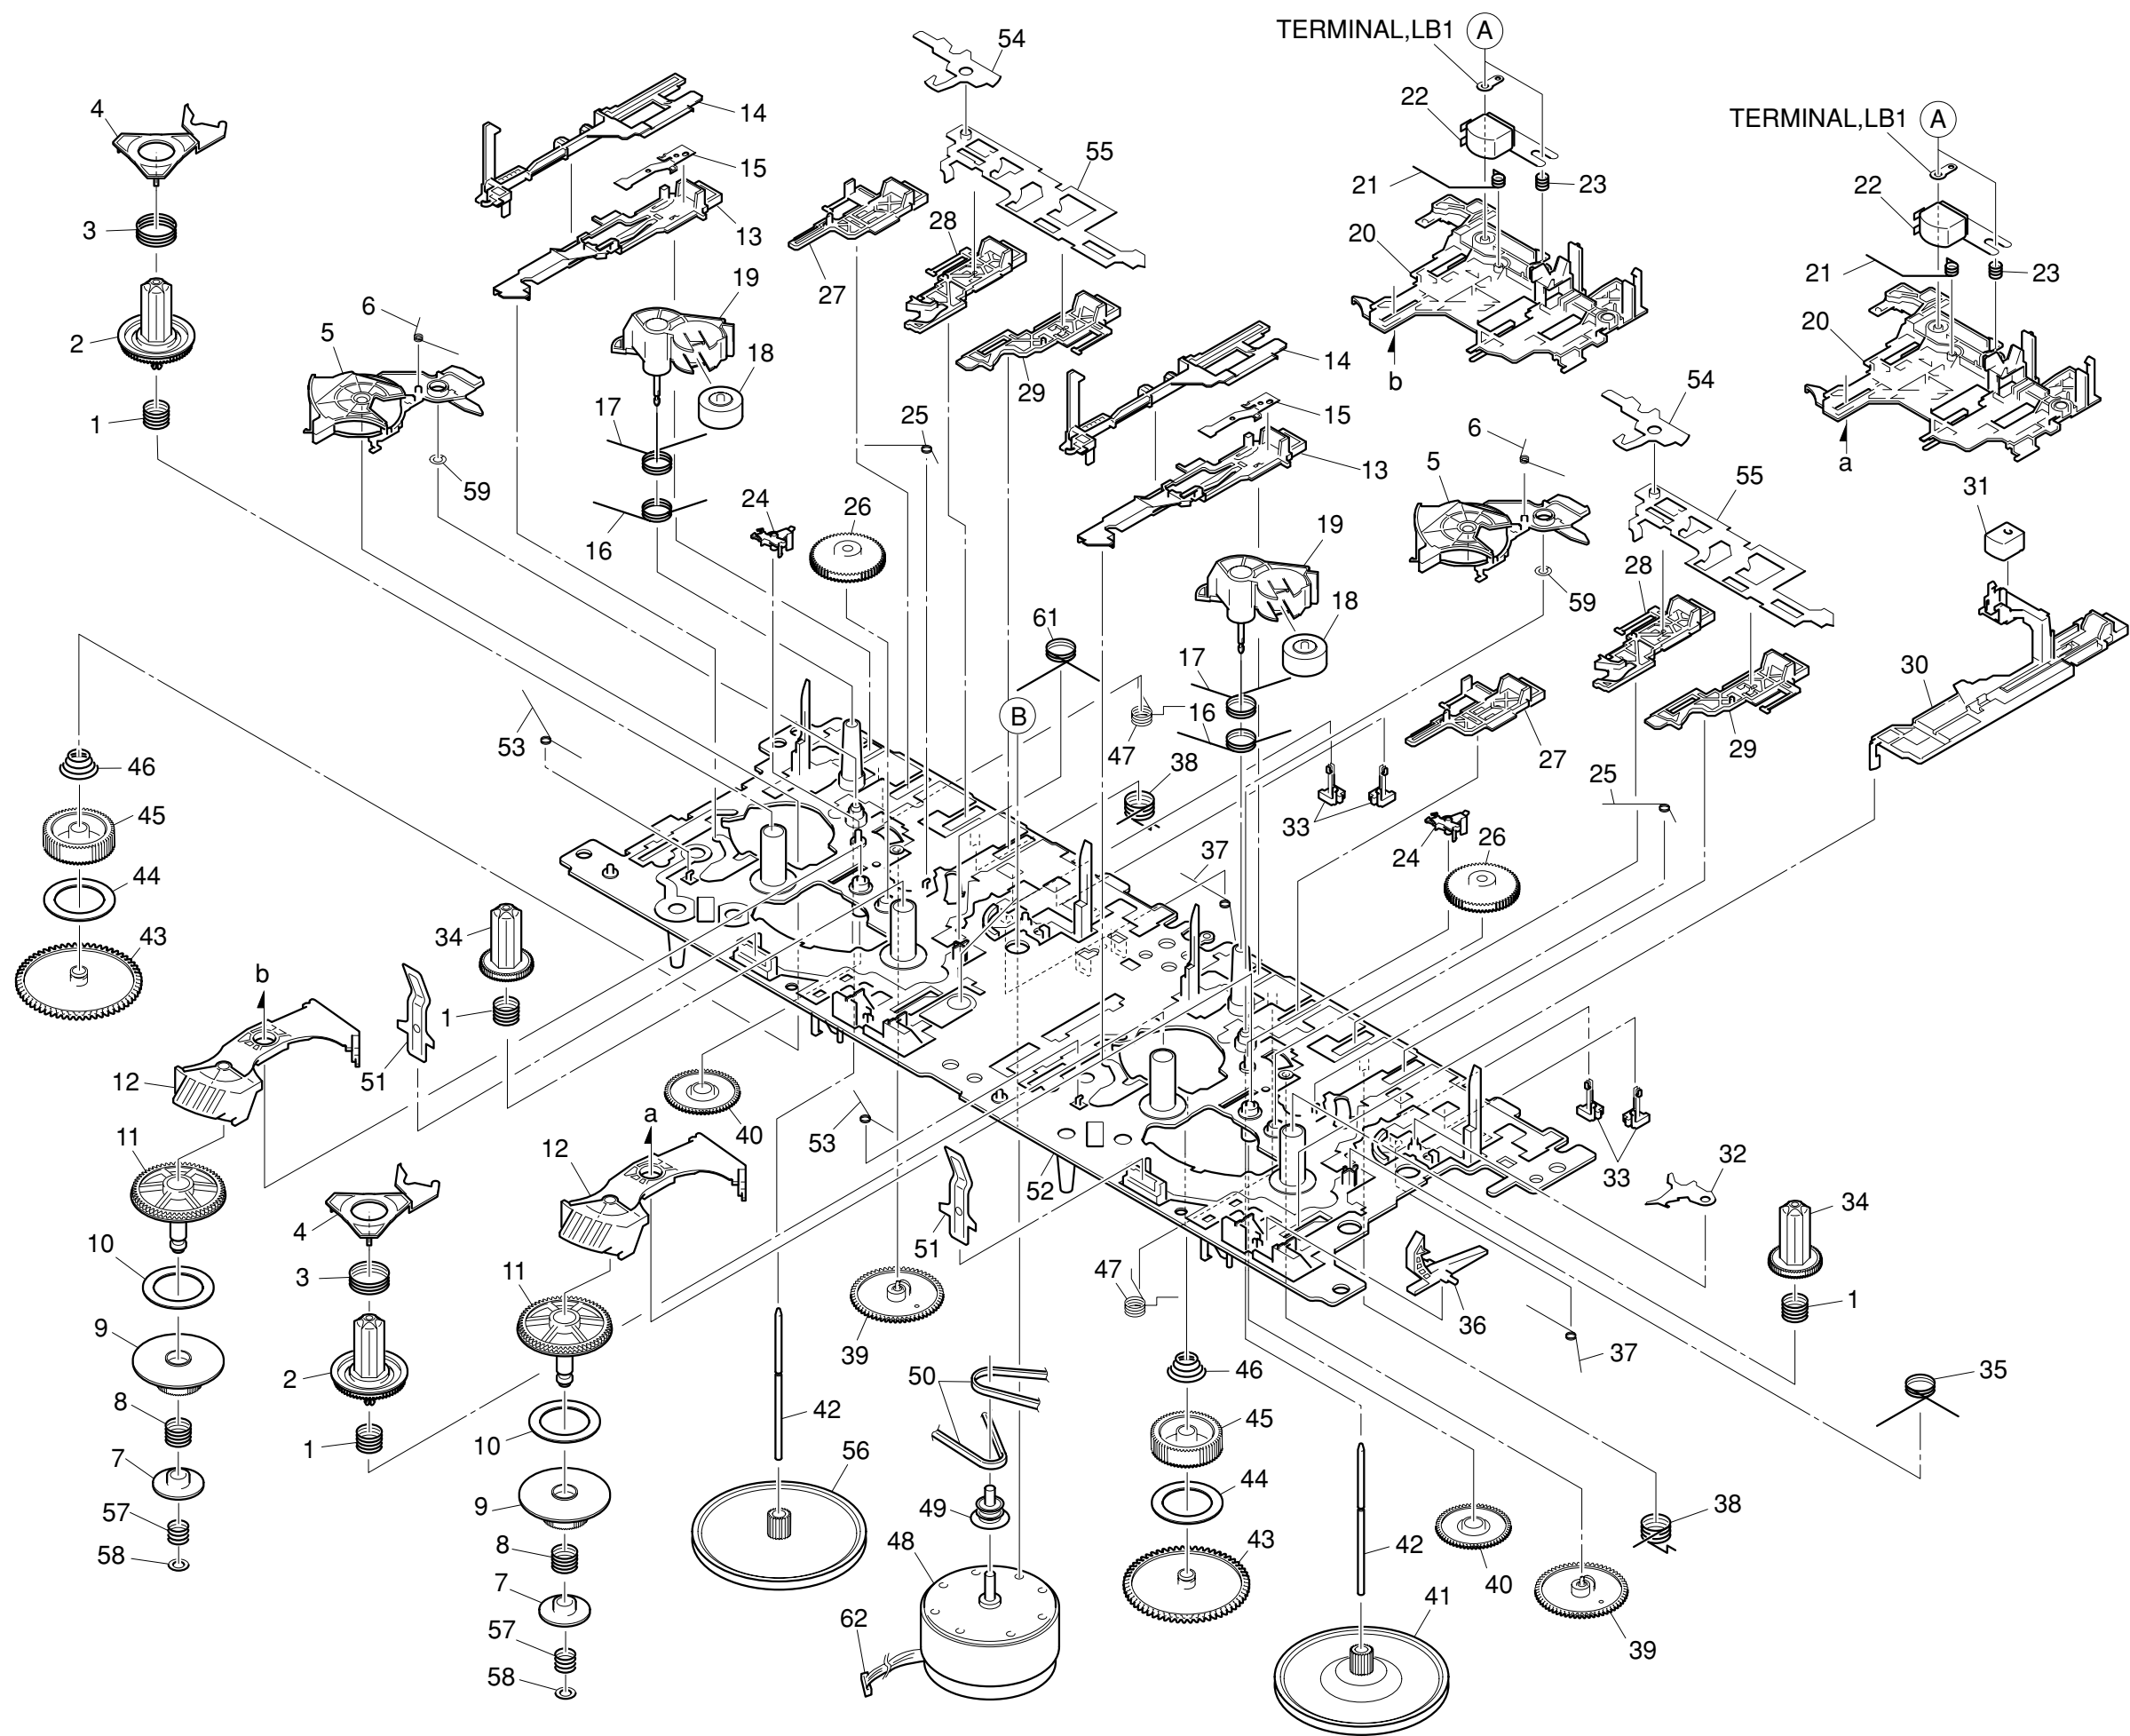

# TAPE MECHANISM PARTS LIST 1 / 1 (ZZM-2 PR1NM / PR1NC)


REF. NO.	PART NO.	KANRI NO.	DESCRIPTION	REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8Z-ZM1-254-210		SPR-C, REEL R	36	8Z-ZM1-220-110		LEVER, REC SENSOR
2	8Z-ZM1-225-110		GEAR, REEL R	37	8Z-ZM1-249-010		SPR-T, FR
3	8Z-ZM1-253-110		SPR-C, AUTO SENSOR	38	8Z-ZM1-242-110		SPR-T, FF/REW
4	8Z-ZM1-217-110		LEVER, AUTO SENSOR	39	8Z-ZM1-229-010		GEAR, CAM
5	8Z-ZM1-212-110		LEVER, T-UP	40	8Z-ZM1-232-010		GEAR, IDL FF/REW
6	8Z-ZM1-245-010		SPR-T, AUTO	41	8Z-ZM1-234-010		FLY-WHL, ZZM-1
7	8Z-ZM1-236-010		CLR, SLIP FF/REW	42	8Z-ZM1-267-010		SHAFT, CAPSTAN 2
8	8Z-ZM1-252-010		SPR-C, FF/REW	43	8Z-ZM1-228-010		GEAR, SLIP T-UP B
9	8Z-ZM1-230-010		GEAR, SLIP FF/REW A	44	8Z-ZM1-265-010		FELT, T-UP
10	8Z-ZM1-269-010		FELT, FF/REW 2	45	8Z-ZM1-227-010		GEAR, SLIP T-UP A
11	8Z-ZM1-238-110		GEAR, SLIP FF/REW B 2	46	8Z-ZM1-251-110		SPR-C, T-UP SLIP
12	8Z-ZM1-237-010		LEVER, FF/REW 2	47	8Z-ZM1-243-210		SPR-T, STOP/PAUSE
13	8Z-ZM1-209-210		LEVER, PAUSE	48	87-A91-532-010		MOT, MS15U2LW1A
14	8Z-ZM1-218-110		LEVER, E-LOCK H	49	8Z-ZM1-235-010		PULLEY, MOT
15	8Z-ZM1-256-010		SPR-P, PAUSE	50	8Z-ZM2-216-010		BELT, MAIN M
16	8Z-ZM1-244-010		SPR-T, T-UP	51	8Z-ZM1-260-010		SPR-P, CASSETTE
17	8Z-ZM1-247-210		SPR-T, PINCH	52	8Z-ZM2-201-010		CHAS ASSY, ZZM-2
18	8Z-ZM1-261-110		ROLLER ASSY, PINCH	53	8Z-ZM1-255-110		SPR-T, E-LOCK
19	8Z-ZM1-221-010		LEVER, PINCH	54	8Z-ZM2-219-010		LEVER, E-OPEN ZZM-2
20	8Z-ZM1-205-210		LEVER, PLAY	55	8Z-ZM1-214-110		LEVER, LOCK
21	8Z-ZM1-248-110		SPR-T, BRG	56	8Z-ZM2-211-010		FLY-WHL, ZZM-2
22	87-A90-403-110		HEAD, RPH MS15R	57	8Z-ZM1-257-110		SPR-C, F/R
23	84-ZM2-227-310		SPR-C, AZIMUTH	58	8Z-ZM1-275-010		W-L, 1.47-4-0.25
24	8Z-ZM1-216-010		LEVER, AUTO	59	80-ZM6-243-010		SH 1.75-3.6-0.5 SLT
25	8Z-ZM1-246-010		SPR-T, AUTO 2	60	87-A91-494-010		SW, LEAF MSW17820
26	8Z-ZM2-214-010		GEAR, IDL REW ZZM-2	61	8Z-ZM1-241-010		SPR-T, PLAY
27	8Z-ZM2-212-010		LEVER, STOP ZZM-2	62	8Z-ZM2-601-010		CONN ASSY, 9P ZZM-2
28	8Z-ZM1-207-010		LEVER, FF	A	84-ZM2-242-010		S-SCREW, AZ1-2-6.4
29	8Z-ZM1-206-010		LEVER, REW	B	8Z-ZM2-220-110		V+2.6 ZZM-2
30	8Z-ZM1-210-010		LEVER, REC				
31	87-A90-404-010		HEAD, EH LE15B				
32	8Z-ZM2-218-010		LEVER, REC LOCK ZZM-2				
33	87-A91-492-010		SW, LEAF MSW18560				
34	8Z-ZM1-226-010		GEAR, REEL L				
35	8Z-ZM1-241-010		SPR-T, PLAY				



# SPEAKER DISASSEMBLY INSTRUCTIONS


## Type.1

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

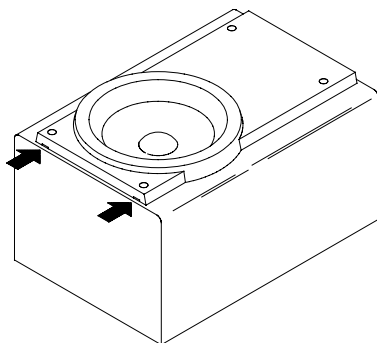


## Type.2

Remove the grill frame and four pieces of rubber caps by pulling out with a flat-bladed screwdriver. Remove the screws from hole where installed rubber caps. Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Remove the screws of each speaker unit and then remove the speaker units.

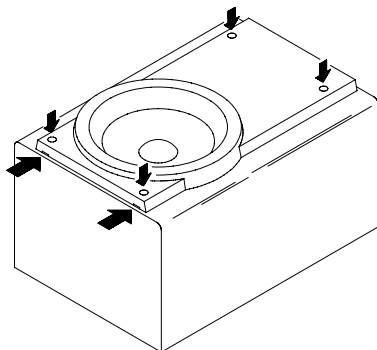


## Type.3

Insert a flat-bladed screwdriver into the position indicated by the arrows and remove the panel. Turn the speaker unit to counter-clockwise direction while inserting a flat-bladed screwdriver into one of the hollows around speaker unit, and then remove the speaker unit. After replacing the speaker unit, install it turning to clockwise direction until "click" sound comes out.

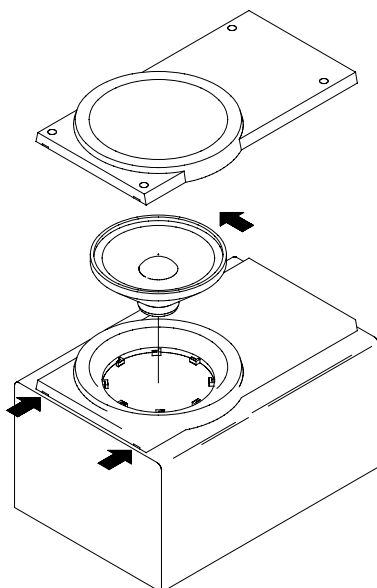

## Type.4

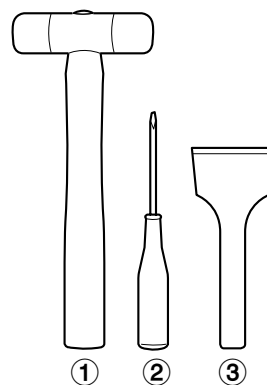

## TOOLS

- ① Plastic head hammer
- ② (⊖) flat head screwdriver
- ③ Cut chisel

## How to Remove the PANEL, FR

1. Insert the (⊖) flat head screwdriver tip into the gap between the PANEL, FR and the PANEL, SPKR. Tap the head of the (⊖) flat head screwdriver with the plastic hammer head, and create the clearance as shown in Fig-1.
2. Insert the cut chisel in the clearance, and tap the head of the cut chisel with plastic hammer as shown in Fig-2, to remove the PANEL, FR.
3. Place the speaker horizontally. Tap head of the cut chisel with plastic hammer as shown in Fig-3, and remove the PANEL, FR completely.

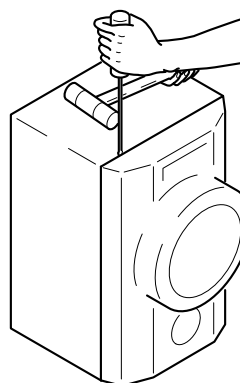


Fig-1

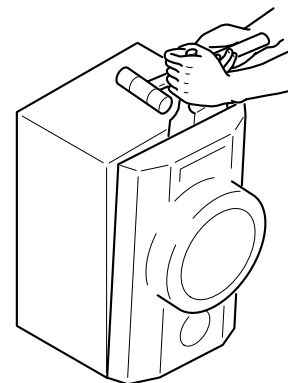


Fig-2

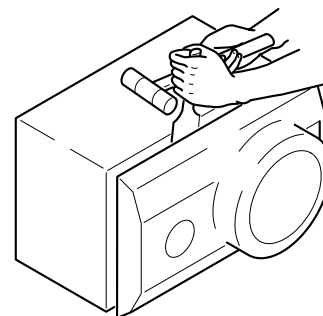


Fig-3

## How to Attach the PANEL, FR


Attach the PANEL, FR to the PANEL, SPKR. Tap the four corners of the PANEL, FR with the plastic hammer to fit the PANEL, FR into the PANEL, SPKR completely.

## SPEAKER PARTS LIST

(SX-NAJ12YUSL / SX-NSZ15YLSC9 / SX-NSZ15YLSC2M / SX-NSZ15YLSC1)

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NSL-001-010		PANEL, FR
2	8A-NSL-003-010		GRILLE, FRAME ASSY
3	8A-NSL-602-010		SPKR, 120
4	8A-NSL-017-010		CORD, SPKR<YLSC2M>
4	87-NS7-611-010		CORD, SPKR<EXCEPT YLSC2M>
5	8Z-NSY-003-010		CORD, BUSH<YLSC2M>

## ACCESSORIES / PACKAGE LIST

REF. NO.	PART NO.	KANRI NO.	DESCRIPTION
1	8A-NFA-902-010		IB, LH (ESP) M<HA, LH>
1	8A-NFA-903-010		IB, U (ESF) M<U>
2	8Z-NF9-701-210		RC UNIT, ZAS02
3	87-043-115-010		ANT, FEEDER FM
4	87-006-225-010		ANT, LOOP ANT NC2
 5	87-A91-017-010		PLUG, CONVERSION JT-0476<LH>

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)  
**AIWA CO.,LTD.** 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111